

Video-inserter

CI-VL2-SY2-N

Compatible with Ford vehicles with Sync2 System with 8" touch monitor



Video-inserter with 2 video + rear-view camera input and CAN control

Product features

- Video-inserter for factory-navigation systems
- 2 video-inputs for after-market devices (e.g. DVD-Player, DVB-T tuner, ...)
- Built-in audio-switch (no audio-insertion)
- Rear-view camera video-input
- Automatic switching to rear-view camera input on engagement of the reverse gear
- Activatable parking guidelines for rear-view camera (not available for all vehicles)
- Video-in-motion (ONLY for connected video-sources)
- Video-inputs NTSC compatible



Contents

1. Prior to installation

1.1.	Delivery contents
1.2.	Checking the compatibility of vehicle and accessories
1.3.	Boxes and connectors
1.3.1.	Video-Interface
1.3.2.	CAN-bus box
1.3.2.1.	Dip-switch settings
1.3.2.2.	Enabling the interface's video inputs (dip 2-3)
1.3.2.3.	Rear-view camera setting (dip 5)
1.4.	Dip-switch settings of the CAN-box

2. Installation

2.1.	Place of installation
2.1.1.	Place of Installation – Interface
2.1.2.	Place of Installation – daughter PCB
2.2.	Con <mark>nection</mark> schema
2.3.	Connecting video-interface and CAN-box
2.4.	Connection to the vehicle's head unit
2.5.	Connection to the vehicle's monitor
2.5.1.	Warning notes, concerning the installation of ribbon cables
2.6.	Connecting of peripheral devices
2.6.1.	Video-source <mark>s</mark> to AV1 and AV2
2.6.2.	Audio-switch and audio-insertion
2.6.3.	After-market r <mark>ear-view</mark> camera
2.6.3.1.	Case 1: CAN-box receives the reverse gear signal
2.6.3.2.	Case 2: CAN-box does not receive the reverse gear signal
2.6.3.3.	Connection Video signal
2.7.	Connecting video-interface and keypad
2.8.	Picture settings and guidelines

3. Interface operation

3.1.	By Voice buttor
3 2	By keynad

4. Specifications

5. FAQ – Trouble Shooting-Interface functions

 2age



Legal Information


By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. Apart from using this product in an unmoved vehicle, it should only be used to display fixed menus or rear-view-camera video when the vehicle is moving (for example the MP3 menu for DVD upgrades).

Changes/updates of the vehicle's software can cause malfunctions of the interface. Up to one year after purchase we offer free software-updates for our interfaces. To receive a free update, the interface has to be sent in at own cost. Wages for de-and reinstallation and other expenditures involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents

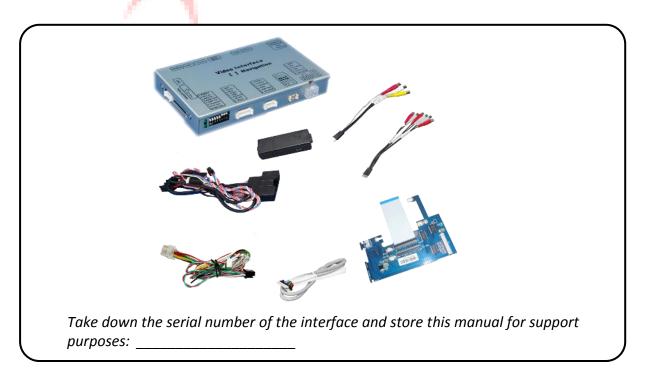



1.2. Checking the compatibility of vehicle and accessories


Brand	Compati	ible vehicle models	Infotainment
		nodel year 2016-2017,	
		odel year 2015-2016,	
		nodel year until 2016,	
	Kuga2 a	bout 2015 until 09/2016,	
Ford	Mondeo	model year 2015-2016/2017,	Sony Sync2 Touch
	Ranger	model year 2015-2016,	
	-	150 model year 2013,	
		nodel year bis 2015,	
	and other	er vehicles with	
Limitations			
Video only		The interface inserts ONLY video signals into the infotainment. For inserting Audio signals either the possibly existing factory audio-AUX-input or a FM-modulator can be used.	
Factory rear-view camera		Automatically switching-back from inserted video to factory rear-view camera is only possible while the reverse gear is engaged. To delay the switch-back, an additional electronic part is required.	
Guidelines		Displayed guidelines are not av	vailable in all vehicles.
Video input signal		Only NTSC video sources are compatible.	



1.3. Boxes and connectors


1.3.1. Video Interface

The video-interface converts the connected after-market sources video signals into a LVDS signal which is inserted in the factory monitor using separate trigger options.

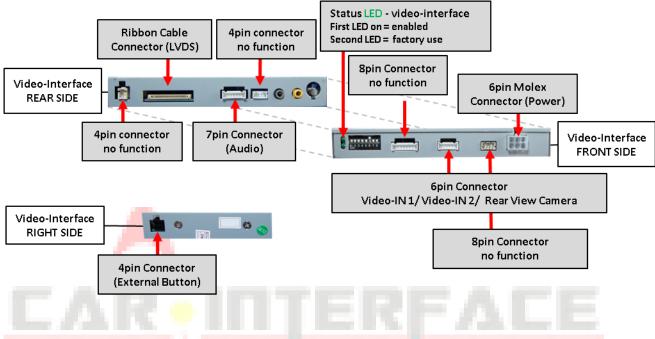

1.3.2. CAN-bus box

The CAN box reads the vehicle's digital signals out of the vehicle's CAN-bus and converts them for the video interface.

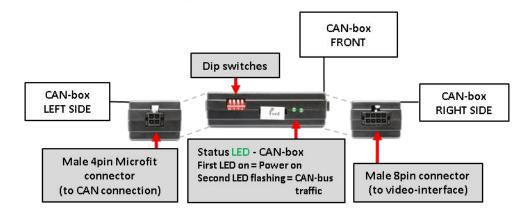



1.3.2.1. Dip-switch settings

Some settings have to be selected by the dip-switches on the video interface. Dip position down is ON and position up is OFF.



Dip	Function	ON (down)	OFF (up)
1	No function		Set to OFF
2	CVBS AV1-input	enabled	disabled
3	CVBS AV2-input	enabled	disabled
4	No function		Set to OFF
5	Rear-view cam type	after-market	factory or none
6	No function	-	Set to OFF
7	No function		Set to OFF
8	No function		Set to OFF

See the following chapters for detailed information.

1.3.2.2. Enabling the interface's video inputs (dip 2-3)

Only the enabled video inputs can be accessed by switching through the interface's video sources. It is recommended to enable only the required inputs, because the disabled inputs will be skipped while switching through the video interfaces inputs.

1.3.2.3. Rear-view camera setting (dip 5)

If set to OFF, the interface switches to factory LVDS picture while the reverse gear is engaged to display factory rear-view camera or factory optical park system picture. If set to ON, the interface switches to its rear-view camera input while the reverse gear is engaged.

1.4. Dip-switch settings of the CAN-box

By using red coloured **4 dip-switches** the CAN-Bus communication between the appropriate factory head-unit and the interface will be associated to the type of vehicle, in which the interface will be connected to.



Dip switch 1-4 have to be set to "OFF".

Dip position down is ON and position up is OFF.

After each Dip-switch-change a power-reset of the Can-box has to be performed!



2. Installation

To install the interface, first switch off the ignition and disconnect the vehicle's battery. Please read the owner's manual of the car, regarding the battery's disconnection! If required, enable the car's Sleep-mode (hibernation mode)

In case the sleep-mode does not succeed, the disconnection of the battery can be done with a resistor lead.

If the necessary stabilized power supply for the interface is not taken directly from the battery, the chosen connection has to be checked for being constantly stabile. The interface needs a permanent 12V source!


2.1. Place of installation

2.1.1. Place of installation for the interface-box

The interface is built to be connected behind the vehicle's monitor and head-unit.

2.1.2. Place of installation for the daughter PCB


The interface's daughter PCB is built to be installed in the monitor housing.

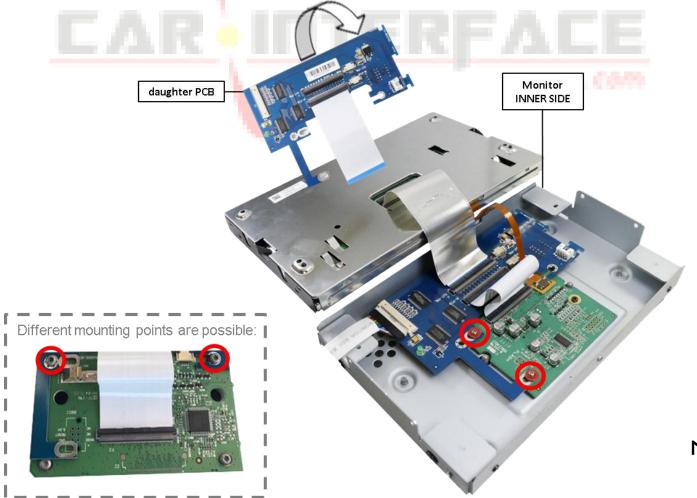

Page




2.2. Connection schema

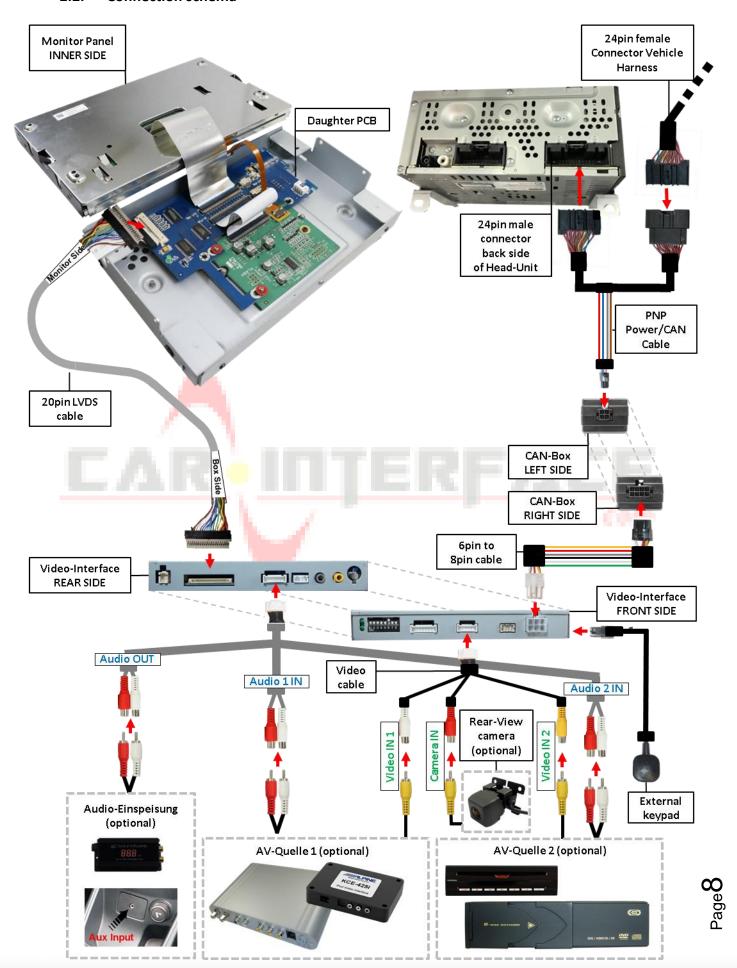



2.3. Connecting video-interface and CAN-box

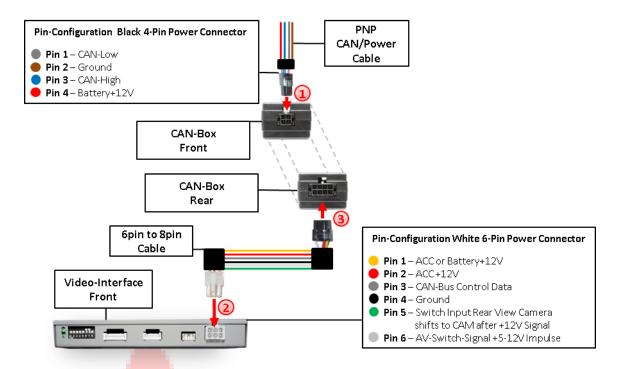

1 Connect the black female 8pin Micro-Fit connector of the PNP Power/CAN harness to the male 8pin Micro-Fit connector of the CAN-box.

Note: Check the LEDs on CAN-box after reconnecting the battery, two must be on.

- 2 Connect the white female 6pin Molex connector of the 6pin to 8pin cable to the male 6pin Molex connector of the video-interface.
- 3 Connect the black female 8pin Micro-Fit connector of the 6pin to 8pin cable to male 8pin Micro-Fit connector of the CAN-box.

Note: Check the LEDs on the video-interface after reconnecting the battery, one must be on.


Note: No liability for vehicle wire colours and pin definition!

Changes by the vehicle manufacturer are possible. The given information has to be verified by the installer.



2.4. Connection to the vehicle's head-unit

Remove the vehicle's head-unit.

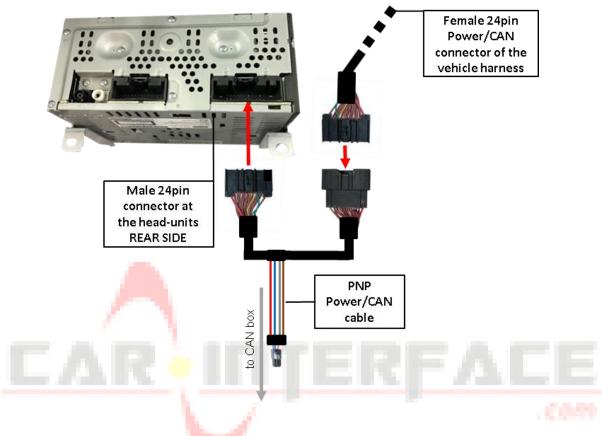


- 1 Disconnect the female 24pin connector of the vehicle harness from the vehicle's head-unit and connect it to the male 24pin connector of the PNP Power/CAN cable
- 2 Connect the female 24pin connector of the PNP Power/CAN cable to the male 24pin connector of the vehicle's head-unit.

Page 10

2.5. Connection to the vehicle's monitor

Remove the vehicle's monitor and turn off the 12 OEM screws of the monitor's frame for folding up the monitor panel from it's housing. Do not loosen the 3 bigger screws on the monitor's rear side!

- 1 Pull out the brown colored 4pin touch ribbon cable from the original PCB. The disconnecting is only necessary for the easy installation procedure! After the installation of the daughter PCB is done, it has to be reconnected at the same place!
- 2 Remove the 60pin ribbon cable from the original PCB by unclipping the Ribbon cable base and connect it to the daughter PCB's 60pin ribbon cable base "OUT PNL". Make sure that the connector pins of each pin connector are faced to the platinum before clipping them.
- 3 Connect the daughter PCB's 60pin ribbon cable to the free 60pin ribbon cable base at the original PCB (take care again for a platinum faced installation of the connector pins!).
- Turn off the 2 screws of the original PCB and fix the daughter PCB onto it, by using the enclosed screws and washers (different mounting points are possible –refer to chapter "Place of installation for the daughter PCB"). The long holes of the daughter PCB will permit a straight mounting and the perfect connection of the ribbon cables
- Connect the beige colored male 20pin connector (Monitor Side) of the 20pin cable to the female 20pin connector of the daughter PCB and connect the second beige colored male 20pin connector (Box Side) opposite the cable to the female 20pin connector of the video interface. Take care for installing the cable in the right direction as both connectors are identical. (Pay attention to the wire's caption "MONITOR SIDE" and "BOX SIDE")

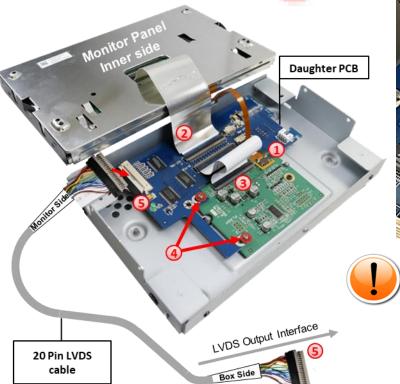

If there is a housing screw at the position marked above during reassembly, it must not reach into the interior of the housing, otherwise, as shown in the picture, the LVDS connector may be damaged when screwed in!

-age **1 1**




2.5.1. Warning notes, concerning the installation of ribbon cables:

- 1) The contacting ends of ribbon cables always have to be installed in a straight and precise 180° position to the connector. Each deviation from a perfect contact position will curse faulty contact and even danger of short circuit
- 2) The ribbon cable's contacting side always has to correspond to the contacting side of the connector, concerning the mounting position.

2.6. Connecting peripheral devices

It is possible to connect one after-market RGB navigation (or another RGB video source), two after-market AV-sources and one after-market rear-view camera to the video-interface.

Before final installation of the peripheral devices, we recommend a test-run to detect a incompatibility of vehicle and interface. Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

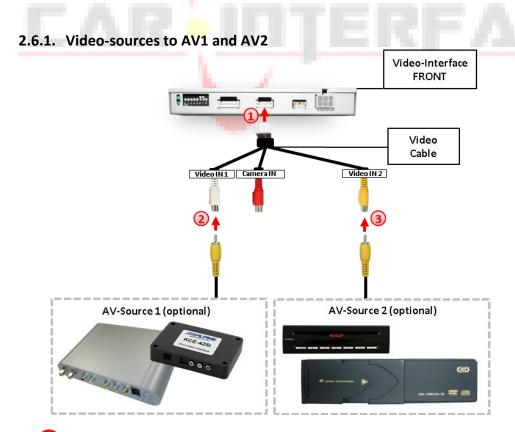

1 Connect the video cable's female 6pin connector to the video interface's male 6pin connector.





Connect of the AV-source 1's video RCA to the video cable's female RCA connector Video IN 1.

3 Connect the AV-source 2's video RCA to the video cable's female RCA connector Video IN2.




2.6.2. Audio-switch and audio-insertion

This interface is only able to insert video signals into the factory infotainment and switch audio signals. If an AV-source is connected to AV1 or AV2, audio insertion must be done by factory audio AUX input or FM-modulator to which the interface's sound-switch output is connected. When the interface is switched from AV1 to AV2, the audio signal is switched parallel to the corresponding video signal by the interface's built-in audio-switch. The inserted video-signal can be activated simultaneously to each audio-mode of the factory infotainment.

Audio pins	Definition
1/2	Audio input signal R/L of source AV2
3/4	Audio input signal R/L of source AV1
5/6	Audio output signal R/L of factory audio AUX or FM-modulator
7	Ground

Note: If only one AV-source shall be connected, it is possible to connect the audio output of the AV-source directly to the point of audio-insertion (e.g. audio AUX input).

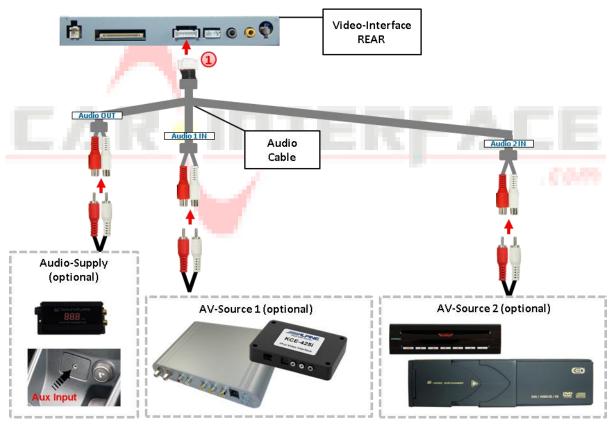

- Connect the female 7pin connector of the audio cable to male 7pin connector of the video-interface.
- Connect the audio-RCA of the possibly existing factory AUX-input or the FM-modulator to the female RCA port AV-Out of the audio cable.
- 3 Connect the audio-RCA of the AV-source 1 to the female RCA port AV1 of the audio cable.
- Connect the audio-RCA of the AV-source 2 to the female RCA port AV2 of the audio cable.




2.6.3. After-market rear-view camera

Some vehicles have a different reverse gear code on the CAN-bus which the included CAN-box is not compatible with. In this case there are two different ways of installation. If the CAN-box is able to detect an enabled vehicle's reverse gear, the green wire of the 6pin to 12pin cable should carry +12V while the reverse gear is engaged.

Note: Do not forget to set dip5 of video-interface to ON before testing.

2.6.3.1. Case 1: CAN-box receives the reverse gear signal

If the CAN-bus box delivers +12V on the green wire of the 6pin to 12pin cable while reverse gear is engaged, the video interface will automatically switch to the rear-view camera input CAM while the reverse gear is engaged.

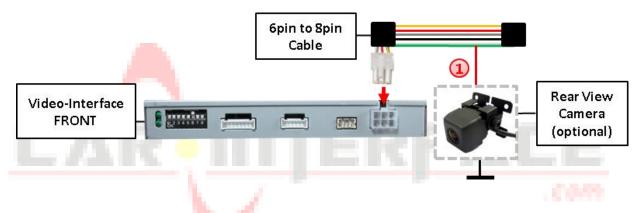


Additionally, the +12V (max. 500mA) power supply for the rear-view camera can be taken from the green wire of the 6pin to 12pin cable.



2.6.3.2. Case 2: CAN-box does not receive the reverse gear signal


If the CAN-bus interface <u>does not</u> deliver +12V on the green wire of the 6pin to 12pin cable when reverse gear is engaged (not all vehicles are compatible) an external switching signal from the reverse gear light is required. As the reverse gear light signal contains electronic interference, a traditional open relay (e.g AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. Below schema shows the use of a relay (normally open).

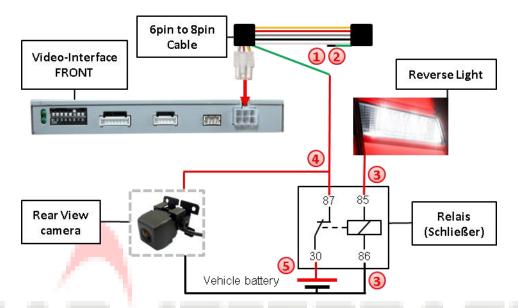

- 1 Cut the green cable of the 6pin to 8pin cable close to the black 12pin connector.
- 2 Isolate the short end of the green wire (CAN-box side).
- 3 Connect the reverse gear light signal/power to coil (85) and ground to coil (86) of relay.
- Connect the rear-view camera power wire and the green wire (video interface side) of 6pin to 8pin cable both to output (87) of the relay.
- Connect permanent battery power to input (30) of relay.




2.6.3.3. Video signal connection

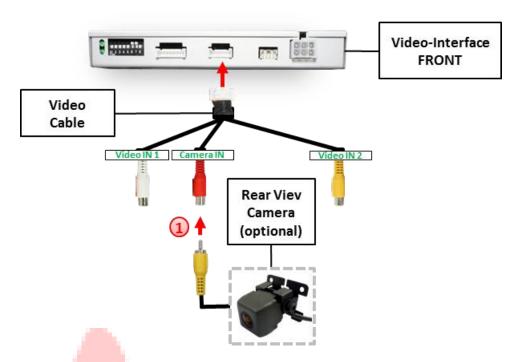

Connect the video-RCA of the after-market rear-view camera to the female RCA port of the video-interface which is labeled as CAM.

Note: The picture settings for CAM input have to be adjusted in AV2.


2.7. Connecting video-interface and keypad

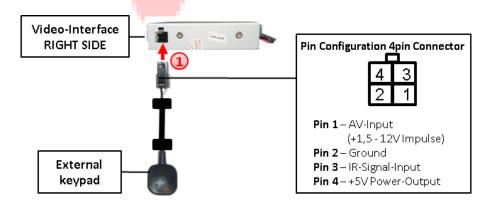

1 Connect the female 4pin connector of the keypad to the male 4pin connector of the video-interface.

Page 17

2.8. Picture settings and guide lines

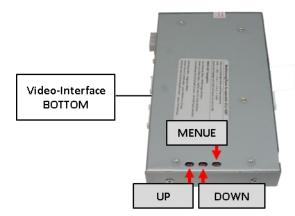

The picture settings are adjustable by the 3 push-buttons on the video-interface. Press the MENU button to open the OSD settings menu or to switch to the next menu item. Press UP and DOWN to change the selected value. The buttons are placed inside in the housing to avoid accidental changes during or after the installation. Picture settings must be done separately for RGB, AV1 and AV2 while the corresponding input is selected and visible on the monitor. AV2 and CAM share the same settings which must be adjusted in AV2.

Note: The OSD menu is only shown when a working video source is connected to the

selected video-input of the interface.

The following settings are available:

Contrast Brightness

Saturation

Position H (horizontal)

Position V (vertical)

IR-AV1/2 (no function)

Guide L/R (no function)

UI-CNTRL (guide lines ON/OFF)

Size H/V (picture size horizontal/vertical)

Contrast	22
Brightness	50
Saturation	r + 6.2
Position-H	6
Position-V	10
IR-AVI	- Sanyo
IR-AV2 · · · ·	· · Mone · · · · · ·
Guide-L	
Guide-R	50
ui-CMTRL	OM
H-SIZE · · ·	16
V-SIZE	- 16

Note: If there is no communication between the CAN box and the vehicle's CAN-bus (several vehicles aren't compatible), the .reverse gear guide-lines can't be shown during the vehicle's operation, even if they once appear after having switched the system to powerless!



3. Interface operation

3.1. By Voice button

To switch the Video sources the vehicle's **Voice button** can be used (pay attention to dip4 in the CAN box, refer chapter "Dip-switch settings of the CAN-box").

Each press will switch to the next enabled input. If all inputs are enabled the order is:

Factory video \rightarrow video IN1 \rightarrow video IN2 \rightarrow factory video \rightarrow ...



Disabled inputs will be skipped. While switching from video in-1 to video in-2 the Audio-source will be switched too, assuming the sources have also been connected to the audio cable

Switchover by vehicle buttons isn't possible in all vehicles. In some vehicles the external keypad has to be used.

Note: The white wire of the 6pin cable can be used with a +5-12V pulse to switch the video-sources alternatively.

3.2. By keypad

Alternatively or additionally to the factory infotainment button, the interface's external keypad can be used to switch the enabled inputs.

4. Specifications

BATT/ACC range 7V - 25V Stand-by power drain <10mA

Power 0.7A @12V Video input 0.7V - 1V Video input formats NTSC

RGB-video amplitude 0.7V with 75 Ohm impedance

Temperature range -40°C to +85°C

Dimensions video-box 155 x 22 x 90 mm (W x H x D)
Dimensions CAN-box 73 x 22 x 30 mm (W x H x D)



5. FAQ – Trouble shooting Interface functions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Comenter	Banan .	Descible selection	
Symptom	Reason	Possible solution	
	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.	
No picture/black picture (factory	No power on CAN-bus box (all LED CAN-bus box are off).	Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box.	
picture).	CAN-bus box connected to CAN-bus in wrong place.	Refer to the manual where to connected to the CANbus. If not mentioned, try another place to connect to the CANbus.	
	No power on video-interface (all LED video-interface are off).	Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface.	
	No picture from video source.	Check on other monitor whether video source is OK.	
No picture/black	No video-source connected to the selected interface input.	Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s).	
picture/white picture (inserted picture) but factory picture is OK.	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.	
1 /A I-			
Inserted picture totally			
wrong size or position.	Wrong monitor settings of	Try different combinations of dips 7 and 8 of video-	
Inserted picture double or 4 times on monitor.	video-interface.	interface. Unplug 6pin power after each change.	
Inserted picture distorted, flickering or running vertically.	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection. If error occurs only after	Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard.	
running vertically.	source switching: Connected sources are not set to the same TV standard.	Set all video sources to the same standard.	
	Some interfaces can only	Check manual whether there is a limitation to NTSC	
Inserted picture b/w.	handle NTSC input.	mentioned. If yes, set source fixed to NTSC output.	
Inserted picture qual.			
bad.			
Inserted picture size	Picture settings have not been		
slightly wrong.	adjusted.	picture settings for the corresponding video input.	
Inserted picture			
position wrong.			
Camera input picture flickers.	Camera is being tested under fluorescent light which shines directly into the camera.	Test camera under natural light outside the garage.	
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.	

²age 20



Symptom	Reason	Possible solution
Camera input picture black.	Camera power taken directly	Use relay or electronics to "clean" reverse gear lamp power. Alternatively, if CAN-bus box is compatible
Camera input picture has distortion.	from reverse gear lamp.	with the vehicle, camera power can be taken from green wire of 6pin to 8pin cable.
Camera input picture settings cannot be adjusted.	Camera input picture settings can only be adjusted in AV2 mode.	Set dip 3 of video-interface to ON (if not input AV2 is not already activated) and connect the camera to AV2. Switch to AV2 and adjust settings. Reconnect camera to camera input and deactivate AV2 if not used for other source.
Graphics of a car in camera input picture.	Function PDC is ON in the interface OSD.	In compatible vehicles, the graphics will display the factory PDC distance. If not working or not wanted, set interface OSD menu item UI-CNTRL to ALLOFF.
Chinese signs in camera input picture	Function RET or ALL is ON (function for Asian market) in the interface OSD.	Set interface OSD menu item UI-CNTRL to ALLOFF or PDCON.
Not possible to switch video sources by OEM button.	CAN-bus interface does not support this function for vehicle.	Use external keypad or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Not possible to switch	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
video sources by external keypad.	SW-version of interface does not support external keypad.	Use OEM-button or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Interface does not switch to camera input when reverse gear is engaged.	CAN-bus interface does not support this function for the vehicles.	Cut the green wire of the 6pin to 8pin cable and apply +12V constant from reverse gear-lamp signal. Use relay to "clean" R-gear lamp power.
Interface switches video-sources by itself.	CAN-bus interface compatibility to vehicle is limited.	Cut the grey wire of 6pin to 8pin and isolate both ends. If problem still occurs, additionally cut the white wire of 6pin to 8pin cable and isolate both ends.



10R-03 5384

Made in China



 2 age 2 1