

r.LiNK Video inserter CI-RL3-MIB92

Skoda vehicles with MIB2 High - Columbus infotainment and 9.2inch monitor VW vehicles with MIB2 High - Discover Pro infotainment and 9.2inch monitor



Video-inserter for one rear-view camera and two more video inputs

Product features

- Video-inserter for factory-infotainment systems
- CVBS Input for one rear-view camera
- 2 CVBS Video-inputs for after-market Video sources (e.g. DVD-Player, DVB-T Tuner)
- Automatic switching to rear-view camera input on engagement of the reverse gear
- Activatable parking guide lines for rear-view camera (not available for all vehicles)
- Video-in-motion (ONLY for connected video-sources)
- Video inputs NTSC compatible



Contents

1. Prior to installation

- 1.1. Delivery contents
- 1.2. Checking the compatibility of vehicle and accessories
- 1.3. Boxes and connectors video interface
- 1.4. Settings of the 8 Dip switches (black)
- 1.4.1.1. Enabling the interface's video inputs (dip 2-3)
- 1.4.1.2. Rear-view camera setting (dip 5)
- 1.4.1.3. Monitor selection (Dip 6-8)
- 1.5. Settings of the 4 Dip switches (CAN function red)

2. Installation

- 2.1. Place of installation
- 2.2. Connection schema
- 2.3. Connection to the factory head unit
- 2.4. Power and CAN connection for the video interface
- 2.5. Analog power supply for the video interface
- 2.6. Connection of video-sources
- 2.6.1. Audio insertion
- 2.6.2. After-market rear-view camera
- 2.6.2.1. Case 1: Interface receives the reverse gear signal
- 2.6.2.2. Case 2Interface does not receive the reverse gear signal
- 2.7. Connecting video-interface and external keypad
- 2.8. Picture settings and guide lines

3. Interface operation

- 3.1. By factory infotainment button
- 3.2. By keypad

4. Specifications

5. FAQ – Trouble Shooting-Interface functions



Legal Information

By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. Apart from using this product in an unmoved vehicle, it should only be used to display fixed menus or rear-view-camera video when the vehicle is moving (for example the MP3 menu for DVD upgrades).


Changes/updates of the vehicle's software can cause malfunctions of the interface. Up to one year after purchase we offer free software-updates for our interfaces. To receive a free update, the interface has to be sent in at own cost. Wages for de-and reinstallation and other expenditures involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The video interface's place of installation must be free of moisture and away from heat sources.

Before the final installation in the vehicle of the video sources, we recommend a test-run to ensure the compatibility of vehicle and interface. Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

1.1. Delivery contents

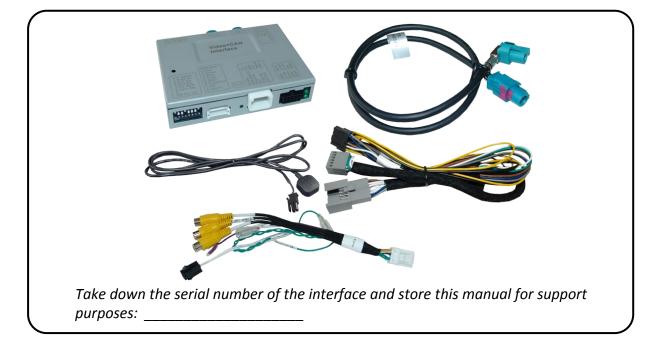



| Requirements | | | | |
|---|--|---|--|--|
| Brand | Compatible vehicles | Compatible systems | | |
| Skoda | Karoq (NU7) MY since 2018 Kodiaq (NS7) MY since 2018 Octavia3 (5E) MY since2018 Superb3 (3V) MY since2018- | MIB2 High - Columbus with 9.2inch monitor. | | |
| vw | Arteon (3H) MY since 2018 Golf7 MY since 2018 Golf7 Sportsvan MY since 2018 Passat (B8) MY since 2018 Tiguan2 (AD1) since MY 2018 Touran (5T) MY since2018- | MIB2 High - Discover Pro with 9.2inch monitor | | |
| Limitations | | | | |
| Video only | For inserting Audio signals eith audio-AUX-input or a FM-mode | the infotainment, an additional | | |
| Factory rear-view came | view camera is only possible w | Automatically switching-back from inserted video to factory rear- view camera is only possible while the reverse gear is engaged. To delay the switch-back an additional electronic part is required. | | |
| Factory PDC | actory PDC With connecting the interface, the former factory PDC graphic won't apply anymore. Acoustic signals will still be present. | | | |
| Guide lines | If the video interface doesn't re information, the guide-lines wi | | | |
| Video input signal only NTSC compatible | | | | |


1.2. Checking the compatibility of vehicle and accessories





1.3. Boxes and connectors – video interface

The video-interface converts the video signals of connected after-market sources in a factory monitor compatible picture signal which is inserted in the factory monitor, by using separate trigger options. Further it reads the vehicle's digital signals out of the vehicle's CAN-bus and converts them for the video interface.

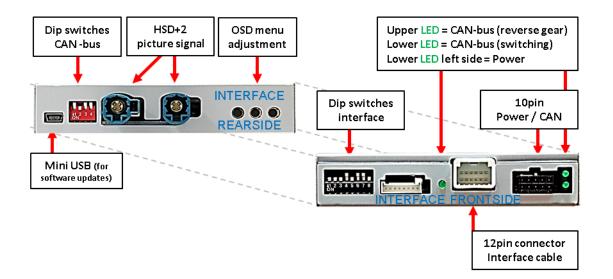

1.4. Settings of the 8 Dip switches (black)

Some settings have to be selected by the dip-switches on the video interface. Dip position down is ON and position up is OFF.



| Dip | Function | ON (down) | OFF (up) |
|-----|-------------------------|--------------|-----------------|
| 1 | No function | | set to OFF |
| 2 | CVBS Video 1-input | enabled | disabled |
| 3 | CVBS Video 2-input | enabled | disabled |
| 4 | No function | | set to OFF |
| 5 | Rear-view cam type | after-market | factory or none |
| 6 | , Monitor adjustment | | set to OFF |
| 7 | | | set to OFF |
| 8 | | set to ON | |

See the following chapters for detailed information.



1.4.1.1. Enabling the interface's video inputs (dip 2-3)

Only by dip switches enabled video inputs can be accessed by switching through the interface's video sources. It is recommended to enable only the required inputs. Disabled inputs will be skipped while switching through the video interfaces inputs.

1.4.1.2. Rear-view camera setting (dip 5)

If set to OFF, the interface switches to factory picture while the reverse gear is engaged to display factory rear-view camera or factory optical park system picture. If set to ON, the interface switches to its rear-view camera input while the reverse gear is engaged.

1.4.1.3. Monitor selection (Dip 6-8)

Dips 6-8 customize the monitor-specific video settings.

Note: Dip 4 is out of function and has to be set to OFF!

1.5. Settings of the 4 Dip switches (CAN functions – red)

Dip position down is ON and position up is OFF.

| Vehicle/Navigation | Dip 1 | Dip 2 | Dip 3 | Dip 4 | |
|--------------------|-------|-------|-------|-------|---------------------|
| All vehicles | OFF | ON | OFF | OFF | ΟN ² 3 4 |

After each Dip-switch-change a power-reset of the Can-box has to be performed!

2. Installation


To install the interface, first switch off the ignition and disconnect the vehicle's battery. Please read the owner's manual of the car, regarding the battery's disconnection! If required, enable the car's Sleep-mode (hibernation mode)

In case the sleep-mode does not succeed, the disconnection of the battery can be done with a resistor lead.

If the necessary stabilized power supply for the interface is not taken directly from the battery, the chosen connection has to be checked for being constantly stabile. The interface needs a permanent 12V source!

2.1. Place of installation


The interface is supposed to be installed at a suitable location behind the vehicle's headunit.

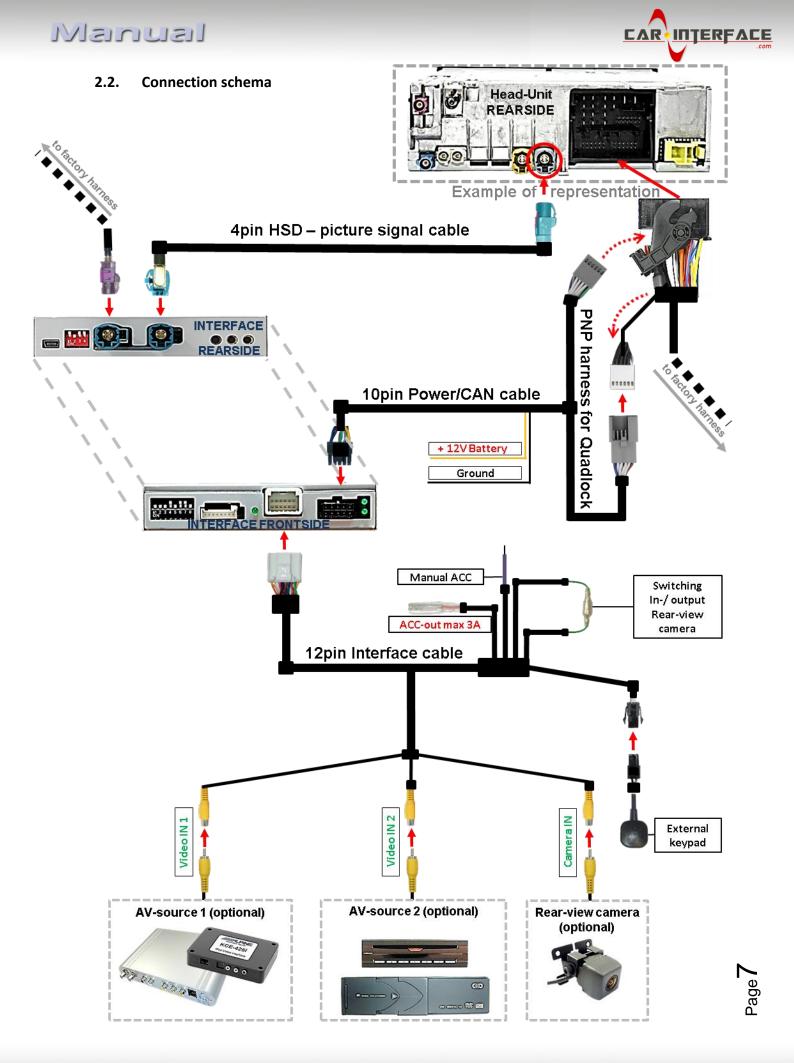



2.3. Connections to the factory head-unit

Manual

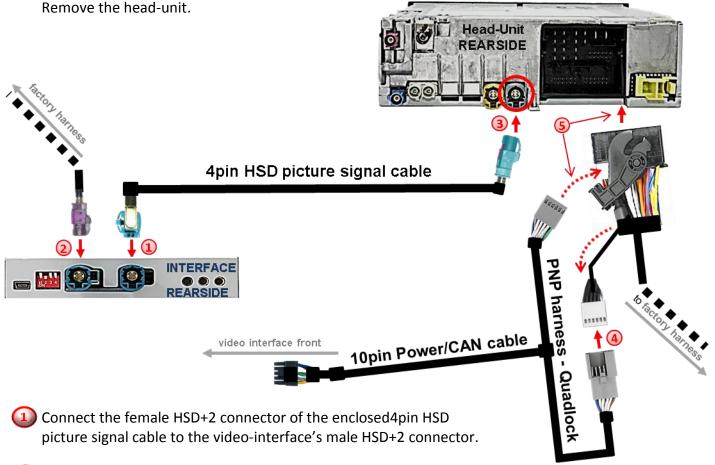

Disconnect the female 4pin HSD connector of the vehicle harness at the Rear-side of the head-unit and connect it to the interface's male 4pin HSD connector.

Note: If required, the marked lugs of the female 4pin HSD connector have to be cut off! Further, the colour of the female 4pin HSD connector may vary between **pink** and **grey**, depending on the installed monitor.




- Connect the female 4pin HSD connector of the enclosed 4pin HSD picture signal cable to the previously become free male 4pin HSD connector of the head-unit (colours may vary!).
- Remove the female Quadlock connector of the vehicle harness from the rear of the head-unit and connect the previously clipped out white female 12pin connector (see graphic) to the male 12pin connector of the enclosed PNP harness.

Clip in the female 12pin connector of the PNP harness in the previously become free position of the female Quadlock connector, before finishing the Quadlock reconnection at the rear of the head-unit.







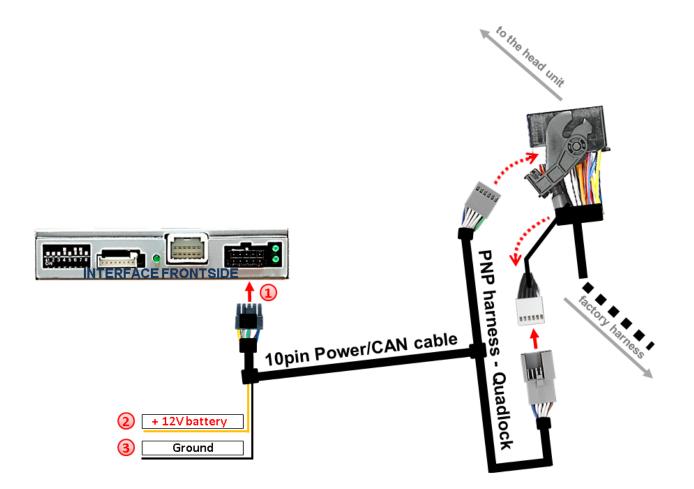

- Connect the 10pin power/CAN cable's female 10pin connector to the 10pin connector of the interface
- Connect the single, yellow wire of the 10pin power/CAN cable to +12V permanent and stabile power supply.

Connect the single, black wire of the 10pin power/CAN cable to the vehicle's negative ground.

If, after connecting the PNP harness, no interface LED lightens up while the ignition is turned on, additionally the analog power supply needs to be done! (see following chapter)




INTERFACE





2.5. Analog power supply for the video interface

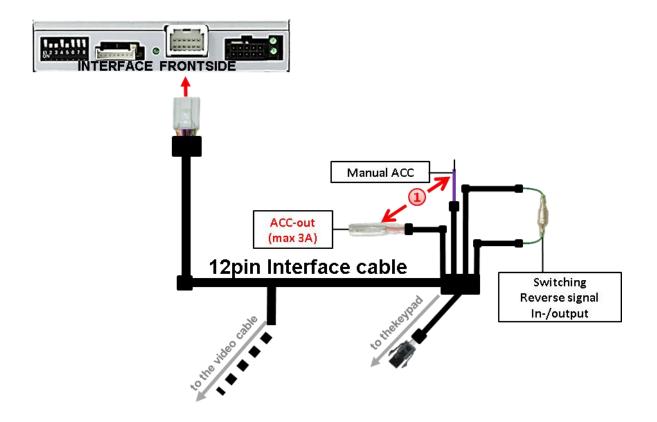


If, after connecting the PNP harness, no interface LED lightens up while the ignition is turned on, the single red wire ACC-out (max 3A) and the purple coloured wire Manual ACC of the 12pin interface cable both have to be connected additionately to S-contact terminal 86s +12V (e.g. glove compartment illumination).



2.6. Connecting video sources

It is possible to connect an after-market rear-view camera and two more Video sources to the video-interface.

Before a final installation of the video sources, we recommend a test-run to ensure the compatibility of vehicle and interface. Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

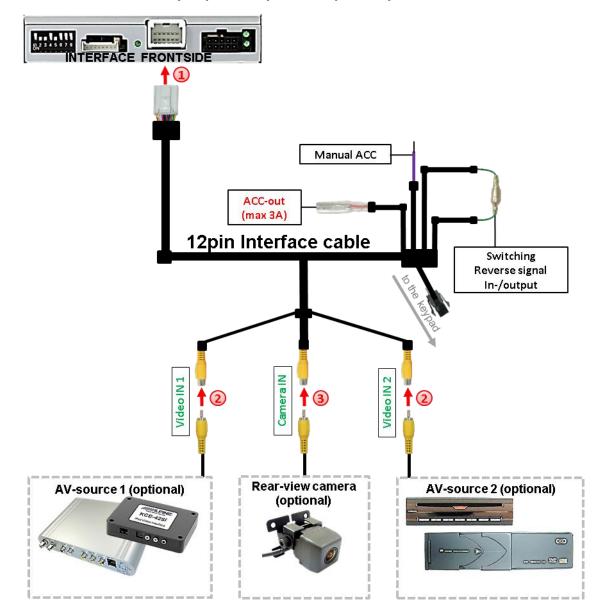

Connect the female 12pin connector of the 12pin interface cable to the male 12pin connector of the video-interface.

2 Connect the video RCA of the AV source 1 and 2 to the female RCA connector "Video IN1" and "Video IN 2" of the 12pin interface cable.

Connect the video RCA of the Rear-view camera to the female RCA connector "Camera IN" of the 20pin interface cable (refer also to chapter "Video signal connection of the rear-view camera")

Page**1**



2.6.1. Audio-insertion

This interface is only able to insert video signals into the factory infotainment. If an AVsource is connected, the audio insertion has to be done by the factory audio AUX input or an FM-modulator. The inserted video-signal can be activated simultaneously to each audiomode of the factory infotainment. If 2 AV sources shall be connected to the infotainment, additional electronic is necessary to switch the audio signals.


2.6.2. After-market rear-view camera

Some vehicles have a different reverse gear code on the CAN-bus which the video-interface is not compatible with. Therefore, there are two different ways of installation. If the video interface receives a signal of the reverse gear, the green wire **"Reverse-OUT"** of the 20pin cable should carry +12V while the reverse gear is engaged.

Note: Do not forget to set video interface's dip5 to ON before testing.

2.6.2.1. Case 1: Interface receives the reverse gear signal

If the interface delivers +12V on the green output wire of the 12pin interface cable while reverse gear is engaged, the video interface will automatically switch to the rear-view camera input "Camera IN" while the reverse gear is engaged.

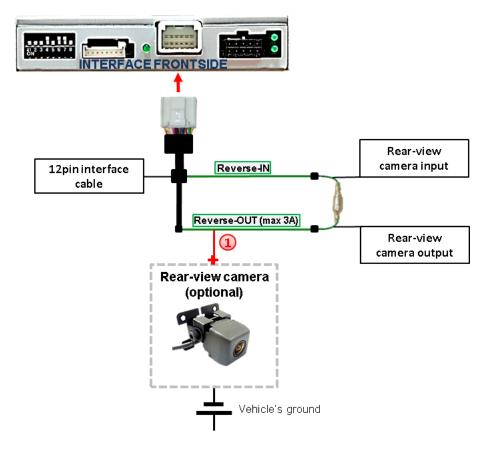


Additionally, the +12V (max. 3A) power supply for the rear-view camera can be taken from the green wire of the 12pin interface cable.



2.6.2.2. Case 2: CAN-box does not receive the reverse gear signal

If the video interface does <u>not</u> deliver +12V on the green wire of the 12pin cable when reverse gear is engaged (not all vehicles are compatible), an external switching signal from the reverse gear light is required. As the reverse gear light's power supply isn't voltagestabile all the time, an ordinary open relay (e.g AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. The diagram below shows the connection type of the relay.

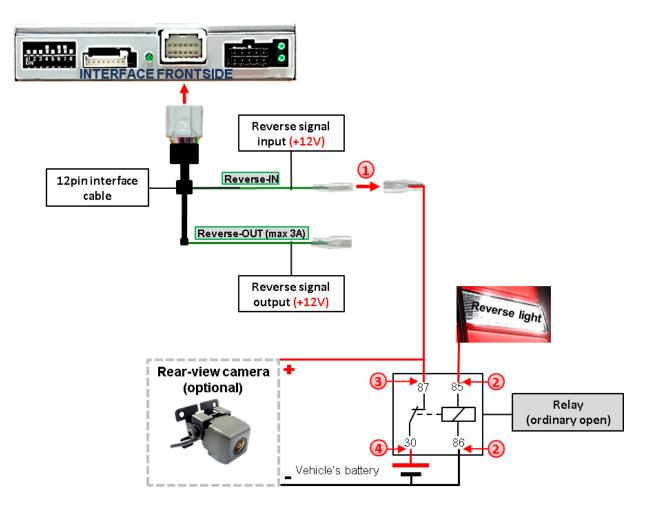

Disconnect the green cable's preconnected male- and female connectors of the 12pin cable and connect the green input cable "Reverse-IN" to the output connector (87) of the relay.

Note: Last but not lot least to avoid short circuits, the best solution should be, to crimp a male 4mm connector to the relay's output cable and connect it to the green cable's female 4mm connector. The output-cable **"Reverse-OUT"** remains disconnected as it's out of function.


2) Connect the Reverse light's power-cable to coil (85) and the vehicle's ground to coil (86) of the relay.

Connect the output connector (87) of the relay to the rear-view camera's powercable, like you did it to the green "Reverse-IN" cable before.

Connect stabile and permanent +12V to the relay's input connector (30).




2.7. Connecting video-interface and keypad

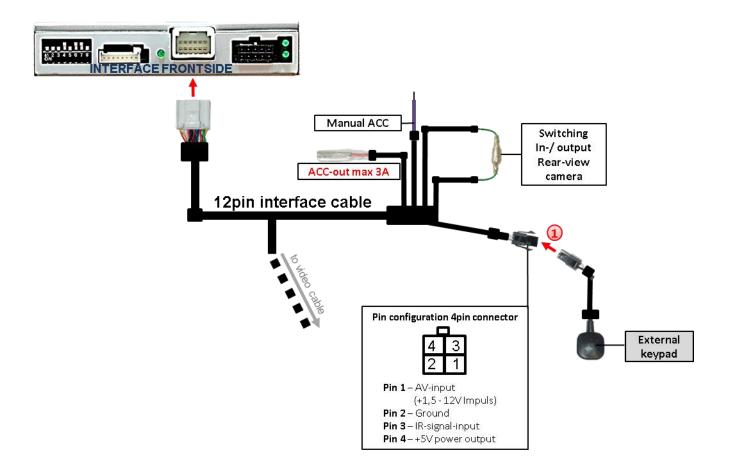


Connect the female 4pin connector of the keypad to the male 4pin connector of the 12pin interface cable.

 Note: Even if switching through several video sources by the keypad mightn't be required, the invisible connection and availability is strongly recommended.






2.8. Picture settings and guide lines

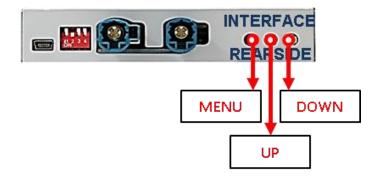

The picture settings are adjustable by the 3 push-buttons on the video-interface. Press the MENU button to open the OSD settings menu or to switch to the next menu item. Press UP and DOWN to change the selected value. The buttons are placed inside in the housing to avoid accidental changes during or after the installation. Picture settings must be done separately for AV1 and AV2 while the corresponding input is selected and visible on the monitor.

Note: The OSD menu is only shown when a working video source is connected to the selected video-input of the interface.

The following settings are available:

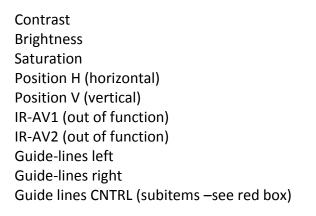

Note: If the video interface does not receive the required

information from the vehicle CAN-bus, neither

moving guide-lines nor PDC will be supported.

Contrast : : : 50 Brightness : 50 Saturation : 62 Position-H : 11 Position-V : 11 IR-AV1 · · · · Sanyo · · · · IR-AV2 · · · · FOSP-DVD · · · Guide-L · · · · 60 Guide-R · · · · 3 Buide-CNTRL AllON · · · · · H-SIZE · · · · 16

Optionen: GUIDE-CNTRL

<u>All ON</u>: Guide lines and PDC will be shown

<u>PDC ON</u>: Only PDC will be shown. <u>**Guide ON**</u>: Only guide lines will be shown.

<u>ALL Off</u>: Guide lines and PDC won't be shown.





3. Interface operation

3.1. By factory infotainment button



To switch the interface's activated video sources, the factory infotainment buttons can be used.

For Skoda / Volkswagen vehicles

Press HOME button to switch the video-source

Pressing the according infotainment button switches the input from the factory video to the inserted video sources. If all inputs are activated by dip switch settings, the order is the following:



Each press will switch to the next enabled input. Inputs which are not enabled will be skipped.

Switchover by vehicle buttons isn't possible in all vehicles. In some vehicles the external keypad has to be used.

3.2. By keypad

Alternatively or additionally to the factory infotainment buttons, the interface's external keypad can be used to switch the enabled inputs. Even if not needed, the keypad should always remain connected to the video interface for support purposes.

Page 16

Manual



4. Specifications

BATT/ACC range Stand-by power drain Power Video input Video input formats Temperature range Dimensions video-box 7V - 25V 7mA 300mA @12V 0.7V - 1V NTSC -40°C to +85°C 119 x 24 x 103 mm (W x H x D)

Page17




5. FAQ – Trouble shooting Interface functions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

| Symptom | Reason | Possible solution | |
|--|--|---|--|
| | Not all connectors have been reconnected to factory head- unit or monitor after installation. | Connect missing connectors. | |
| No picture/black picture (factory picture). | No power on CAN-bus box (all LED CAN-bus box are off). | Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box. | |
| | CAN-bus box connected to CAN-bus in wrong place. | Refer to the manual where to connected to the CAN- bus. If not mentioned, try another place to connect to the CAN-bus. | |
| | No power on video-interface (all LED video-interface are off). | Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface. | |
| | No picture from video source. | Check on other monitor whether video source is OK. | |
| No picture/black picture/white picture (inserted picture) but factory picture is OK. | No video-source connected to the selected interface input. | Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s). | |
| | LVDS cables plugged in wrong place. | Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head- unit does not work when the manual says to plug into monitor and vice versa. | |
| Inserted picture totally wrong size or position. Inserted picture double or 4 times on monitor. | Wrong monitor settings of video-interface. | Try different combinations of dips 7 and 8 of video- interface. Unplug 6pin power after each change. | |
| Inserted picture distorted, flickering or running vertically. | Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection. | Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard. | |
| | If error occurs only after source switching: Connected sources are not set to the same TV standard. | Set all video sources to the same standard. | |
| | Some interfaces can only | Check manual whether there is a limitation to NTSC | |
| Inserted picture b/w. Inserted picture qual. bad. Inserted picture size | handle NTSC input. Picture settings have not been | mentioned. If yes, set source fixed to NTSC output. Use the 3 buttons and the interface's OSD to adjust the | |
| slightly wrong. Inserted picture position wrong. | adjusted. | picture settings for the corresponding video input. | |
| Camera input picture flickers. | Camera is being tested under fluorescent light which shines directly into the camera. | Test camera under natural light outside the garage. | |
| Camera input picture is bluish. | Protection sticker not removed from camera lens. | Remove protection sticker from lens. | |



| Symptom | Reason | Possible solution |
|---|--|---|
| Camera input picture | | Use relay or electronics to "clean" reverse gear lamp |
| black. | Camera power taken directly | power. Alternatively, if CAN-bus box is compatible |
| Camera input picture | from reverse gear lamp. | with the vehicle, camera power can be taken from |
| has distortion. | | green wire of 6pin to 8pin cable. |
| | | Set dip 3 of video-interface to ON (if not input AV2 is |
| Camera input picture | Camera input picture settings | not already activated) and connect the camera to AV2. |
| settings cannot be | can only be adjusted in AV2 | Switch to AV2 and adjust settings. Reconnect camera |
| adjusted. | mode. | to camera input and deactivate AV2 if not used for |
| | | other source. |
| Graphics of a car in | Function PDC is ON in the interface OSD. | In compatible vehicles, the graphics will display the |
| camera input picture. | | factory PDC distance. If not working or not wanted, set |
| camera input picture. | | interface OSD menu item UI-CNTRL to ALLOFF. |
| Chinese signs in camera input picture | Function RET or ALL is ON | Set interface OSD menu item UI-CNTRL to ALLOFF or |
| | (function for Asian market) in | PDCON. |
| | the interface OSD. | |
| Not possible to switch video sources by OEM button. | CAN-bus interface does not | Use external keypad or cut white wire of 6pin to 8pin |
| | support this function for | cable and apply +12V impulses for AV-switching. |
| | vehicle. | |
| | Pressed too short. | For video source switching a longer press of about 2.5 |
| Not possible to switch | | seconds is required. |
| video sources by | SW-version of interface does | Use OEM-button or cut white wire of 6pin to 8pin |
| external keypad. | not support external keypad. | cable and apply +12V impulses for AV-switching. |
| Interface does not | CAN-bus interface does not | Cut the green wire of the 6pin to 8pin cable and apply |
| switch to camera input | support this function for the | +12V constant from reverse gear-lamp signal. Use |
| when reverse gear is | vehicles. | relay to "clean" R-gear lamp power. |
| engaged. | | |
| Interface switches | CAN-bus interface | Cut the grey wire of 6pin to 8pin and isolate both |
| video-sources by itself. | compatibility to vehicle is | ends. If problem still occurs, additionally cut the white |
| | limited. | wire of 6pin to 8pin cable and isolate both ends. |

 

Made in China



