

Product Description

Item	OBD-MMI3G-BT-x
Function	Diagnosis tool for MMI 3G systems.



Instructions


1. Remove the cover and turn on the ignition.



2. Connect the TV302HM interface to the OBD socket for about 15 seconds in order to activate the function.




3. Push and hold „CAR“ and the additionally push and hold „SETUP“ button for about 3 sec. .

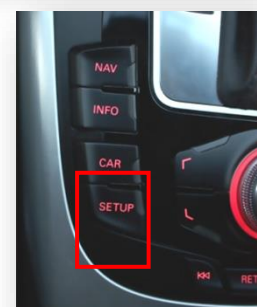


4. After successful activation of the MMI 3G diagnosis menu level, use the following way for bluetooth activation:

- Step 1: „diagnose“

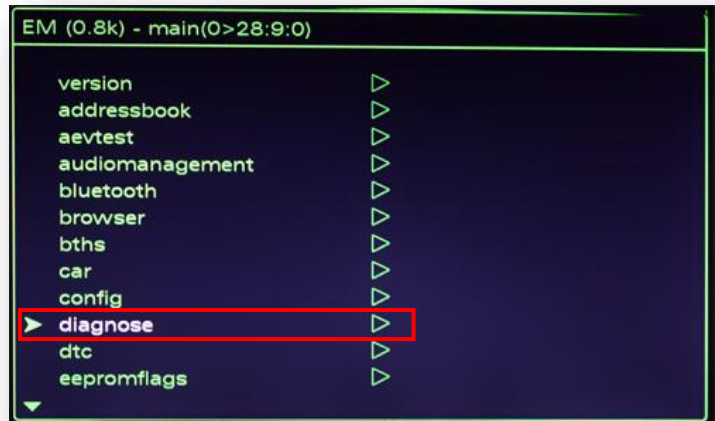


- Step 2: „settings“

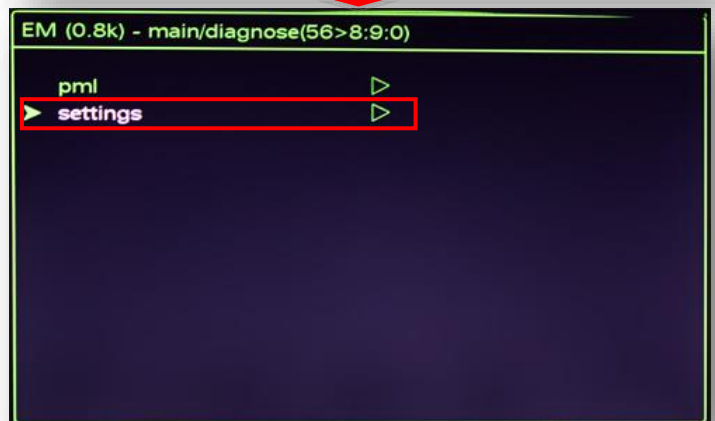

- Step 3: „AMI/AUX“

Then take the following adjustment:
„(no AUX/AMI BT/AMI) 5/8“

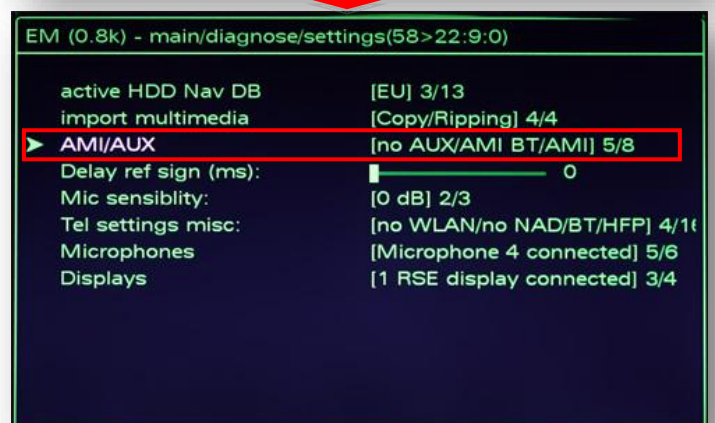

5. By pushing the „CAR“ button, the MMI 3G diagnosis will be disabled.

Disconnect the TV302HM interface and reattach the cover.



Technical data

Software version:	V1.0.0
Voltage supply:	12V DC
Voltage-operating capacity:	10,5 - 14,8 V
Operating current:	48mA
Power input:	0,70 W
Temperature range:	- 30°C - + 80°C
Weight:	84 g
Measurements:	73 x 26 x 66 mm

The product is designed for automotive use and therefore has a life span of at most 10 years.