



OBD-N5-AV-01

Audio Video A/V option OBD-Activator for Mercedes COMAND Online NTG5

To be able to use the factory audio A/V-input, it is necessary to enable the A/V option in the navigation's / radio menu, which can be done with the OBD-N5-AV-01.

Delivery contents

HW	
5W	
	Caraudio-Systema
	BD-NS-AU-01 AVM activation (Pr 1 vehicity) C C

Legal Information

Changes/updates of the vehicle's software can cause malfunctions of the interface. We offer free software-updates for our interfaces for one year after purchase. To receive a free update, the interface must be sent in at own cost. Labor cost for and other expenses involved with the software-updates will not be refunded.





Check compatibility of vehicle and accessories

Requirements	
Vehicle	Mercedes C class (W205), GLC (X253), V class (W447), s class (W222)
Device	COMAND Online NTG5

Installation

- 1. Locate OBD-port and remove cover
- 2. Turn on ACC
- 3. Wait until the navigation has booted
- 4. Plug coder into OBD-port
- 5. The navigation will re-boot
- 6. When the navigation's startup-screen shows, remove coder from OBD-port


To remove the A/V option from the navigation's menu repeat steps 1.-6.

After the first use on a vehicle, the coder OBD-N5-AV-01 is personalized to this vehicle. On this vehicle the enabling and removing the A/V option can be repeated without limit.

The AUX-cable must be connected into the vehicles harness' female Quadlock connector on the rear-side of the navigation computer.

AUDIOSIGNAL pinout COMAND ONLINE NTG5:

Quadlock connector, chamber A Pin 6 • Audio NF + left Pin 12 • Audio NF + right Pin 11 • Audio NF ground

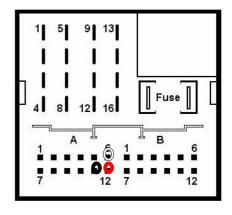

VIDEOSIGNAL pinout COMAND ONLINE NTG5: Quadlock connector, chamber A Fakra plug • Video In



Video In "AUX"





LED information:

LED	Status	Explication
Green	Lights	Coding procedure successfully completed
	Flashes	Coding process is running
Red	Lights	Remove coding procedure successfully completed
	Flashes	Coding process failed / license violation
Green + Red	Lights	CAN Communication Error! - Abort of the diagnostic session

Technical Support

Caraudio-Systems Vertriebs GmbH Manufacturer / Distributor In den Fuchslöchern 3 D-67240 Bobenheim-Roxheim

Email: support@caraudio-systems.de

Legal disclaimer: Mentioned company and trademarks, as well as product names/codes are registered trademarks [®] of their corresponding legal owners.

C€ ----12V DC