

v.LiNK Video-inserter

CI-VL2-CONCERT

**Compatible with Audi vehicles with
Symphony-or Concert Radio system
and 6,5" Touch-Monitor**



Video-inserter with 2 video + RGB + rear-view camera input and CAN control

Product features

- Video-inserter for factory-monitors
- 2 video-inputs for after-market devices (e.g. DVD-Player, DVB-T tuner, ...)
- Built-in audio-switch (no audio-insertion)
- Rear-view camera video-input
- Automatic switching to rear-view camera input on engagement of the reverse gear
- Activatable parking guide lines for rear-view camera (vehicle specific restrictions possible)
- RGB-input for after-market navigation
- Video-in-motion (ONLY for connected video-sources)
- Compatible with factory rear-view camera
- Video-inputs PAL/NTSC compatible

Contents

1. Prior to installation

- 1.1. Delivery contents
- 1.2. Checking the compatibility of vehicle and accessories
- 1.3. Boxes and connectors
 - 1.3.1. Video-Interface
 - 1.3.2. CAN-bus box
 - 1.3.2.1. Dip-switch settings
 - 1.3.2.2. Enabling the interface's video inputs (dip 1-3)
 - 1.3.2.3. RGB-video input signal selection for after-market navigation (Dip 4)
 - 1.3.2.4. Rear-view camera setting (dip 5)
 - 1.3.2.5. Monitor adjustments (dip 7-8)

2. Installation

- 2.1. Place of installation
- 2.2. Connection schema
- 2.3. Connecting video-interface and CAN-box
- 2.4. Connection to the factory monitor
- 2.5. Connection to the climate control unit
- 2.6. Connecting video sources
 - 2.6.1. After market RGB navigation
 - 2.6.2. Video-sources to AV1 and AV2
 - 2.6.3. Audio-switch and audio-insertion
 - 2.6.4. After-market rear-view camera
 - 2.6.4.1. Case 1: CAN-box receives the reverse gear signal
 - 2.6.4.2. Case 2: CAN-box does not receive the reverse gear signal
 - 2.6.4.3. Connection Video signal
- 2.7. Connecting video-interface and keypad
- 2.8. Picture settings and guide lines

3. Interface operation

- 3.1. By MODE-button of the steering-wheel
- 3.2. By keypad

4. Specifications

5. FAQ – Trouble Shooting-Interface functions

Legal Information

By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. Apart from using this product in an unmoved vehicle, it should only be used to display fixed menus or rear-view-camera video when the vehicle is moving (for example the MP3 menu for DVD upgrades).

Changes/updates of the vehicle's software can cause malfunctions of the interface. Up to one year after purchase we offer free software-updates for our interfaces. To receive a free update, the interface has to be sent in at own cost. Wages for de-and reinstallation and other expenditures involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents



Take down the serial number of the interface and store this manual for support purposes: _____

1.2. Checking the compatibility of vehicle and accessories

Requirements

<i>Vehicle</i>	Audi A4 (8K), A5 (8T), A6 (4F,4G), Q5 (8R)
<i>Head-unit/monitor</i>	Symphony- or Concert-radio systems with 6,5" monitor


Limitations

<i>Video only</i>	The interface inserts ONLY video signals into the infotainment. For inserting Audio signals either a FM-modulator or the factory audio-AUX-input can be used, which can be coded by vehicle dealer.
<i>Factory rear-view camera</i>	Automatically switching-back from inserted video to factory rear-view camera is only possible while the reverse gear is engaged. To delay the switch-back an additional electronic part is required.

1.3. Boxes and connectors


1.3.1. Video Interface

The video-interface converts the connected after-market sources video signals into a LVDS signal which is inserted in the factory monitor using separate trigger options.

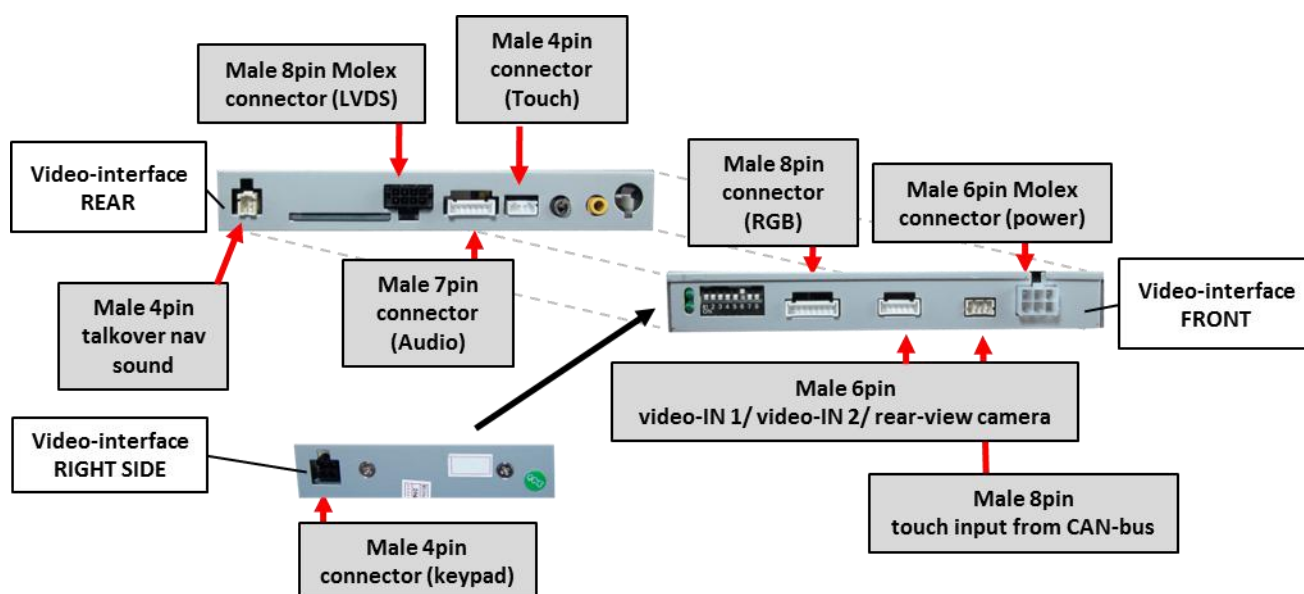


1.3.2. CAN-bus box

The CAN box reads the vehicle's digital signals out of the vehicle's CAN-bus and converts them for the video interface.

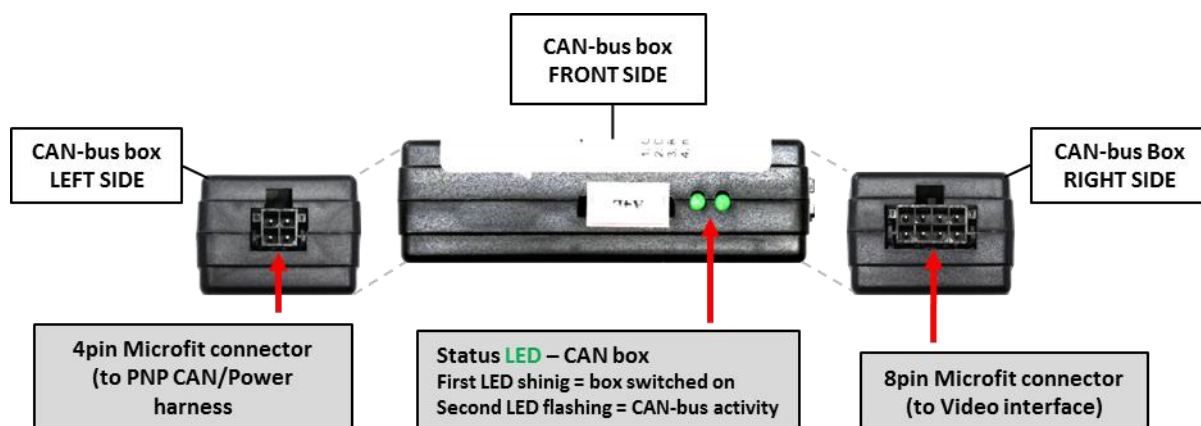

1.3.2.1. Dip-switch settings

Some settings must be selected by the dip-switches on the video interface. Dip position down is ON and position up is OFF.

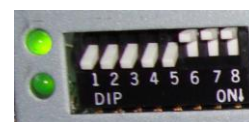

Dip	Function	ON (down)	OFF (up)
1	RGB-input	enabled	disabled
2	CVBS AV1-input	enabled	disabled
3	CVBS AV2-input	enabled	disabled
4	RGB-input resolution	VGA 800x480	RGB NTSC 400x240 or 480x240
5	Rear-view cam type	after-market	factory or none
6	No function	-	set OFF
7	Monitor adjustments	-	set OFF
8		-	set OFF

See the following chapters for detailed information.

After each Dip-switch-change a power-reset of the Can-box has to be performed!

1.3.2.2. Enabling the interface's video inputs (dip 1-3)

Only the enabled video inputs can be accessed by switching through the interface's video sources. It is recommended to enable only the required inputs. So the disabled inputs will be skipped while switching through the video interfaces inputs.

1.3.2.3. RGB-video input signal selection for after-market navigation (Dip 4)

If after-market RGB navigation or other RGB video source is connected, the source's RGB output signal must match the interface's RGB video input setting.

1.3.2.4. Rear-view camera setting (dip 5)

In the OFF position, the interface switches to factory LVDS picture while the reverse gear is engaged to display factory rear-view camera or factory optical park system picture.

If the switch is set to ON, the interface switches to its rear-view camera input while the reverse gear is engaged.

1.3.2.5. Monitor adjustments (dip 7-8)

Set Dip 7 and 8 to OFF.

2. Installation

To install the interface, first switch off the ignition and disconnect the vehicle's battery. Please read the owner's manual of the car, regarding the battery's disconnection! If required, enable the car's Sleep-mode (hibernation mode)

In case the sleep-mode does not succeed, the disconnection of the battery can be done with a resistor lead.


If the necessary stabilized power supply for the interface is not taken directly from the battery, the chosen connection has to be checked for being constantly stabile.

The interface needs a permanent 12V source!


2.1. Place of installation

The interface is built to be installed on the backside of the factory monitor, at the climate control panel and on the backside of the vehicle's head unit.

2.2. Connection schema

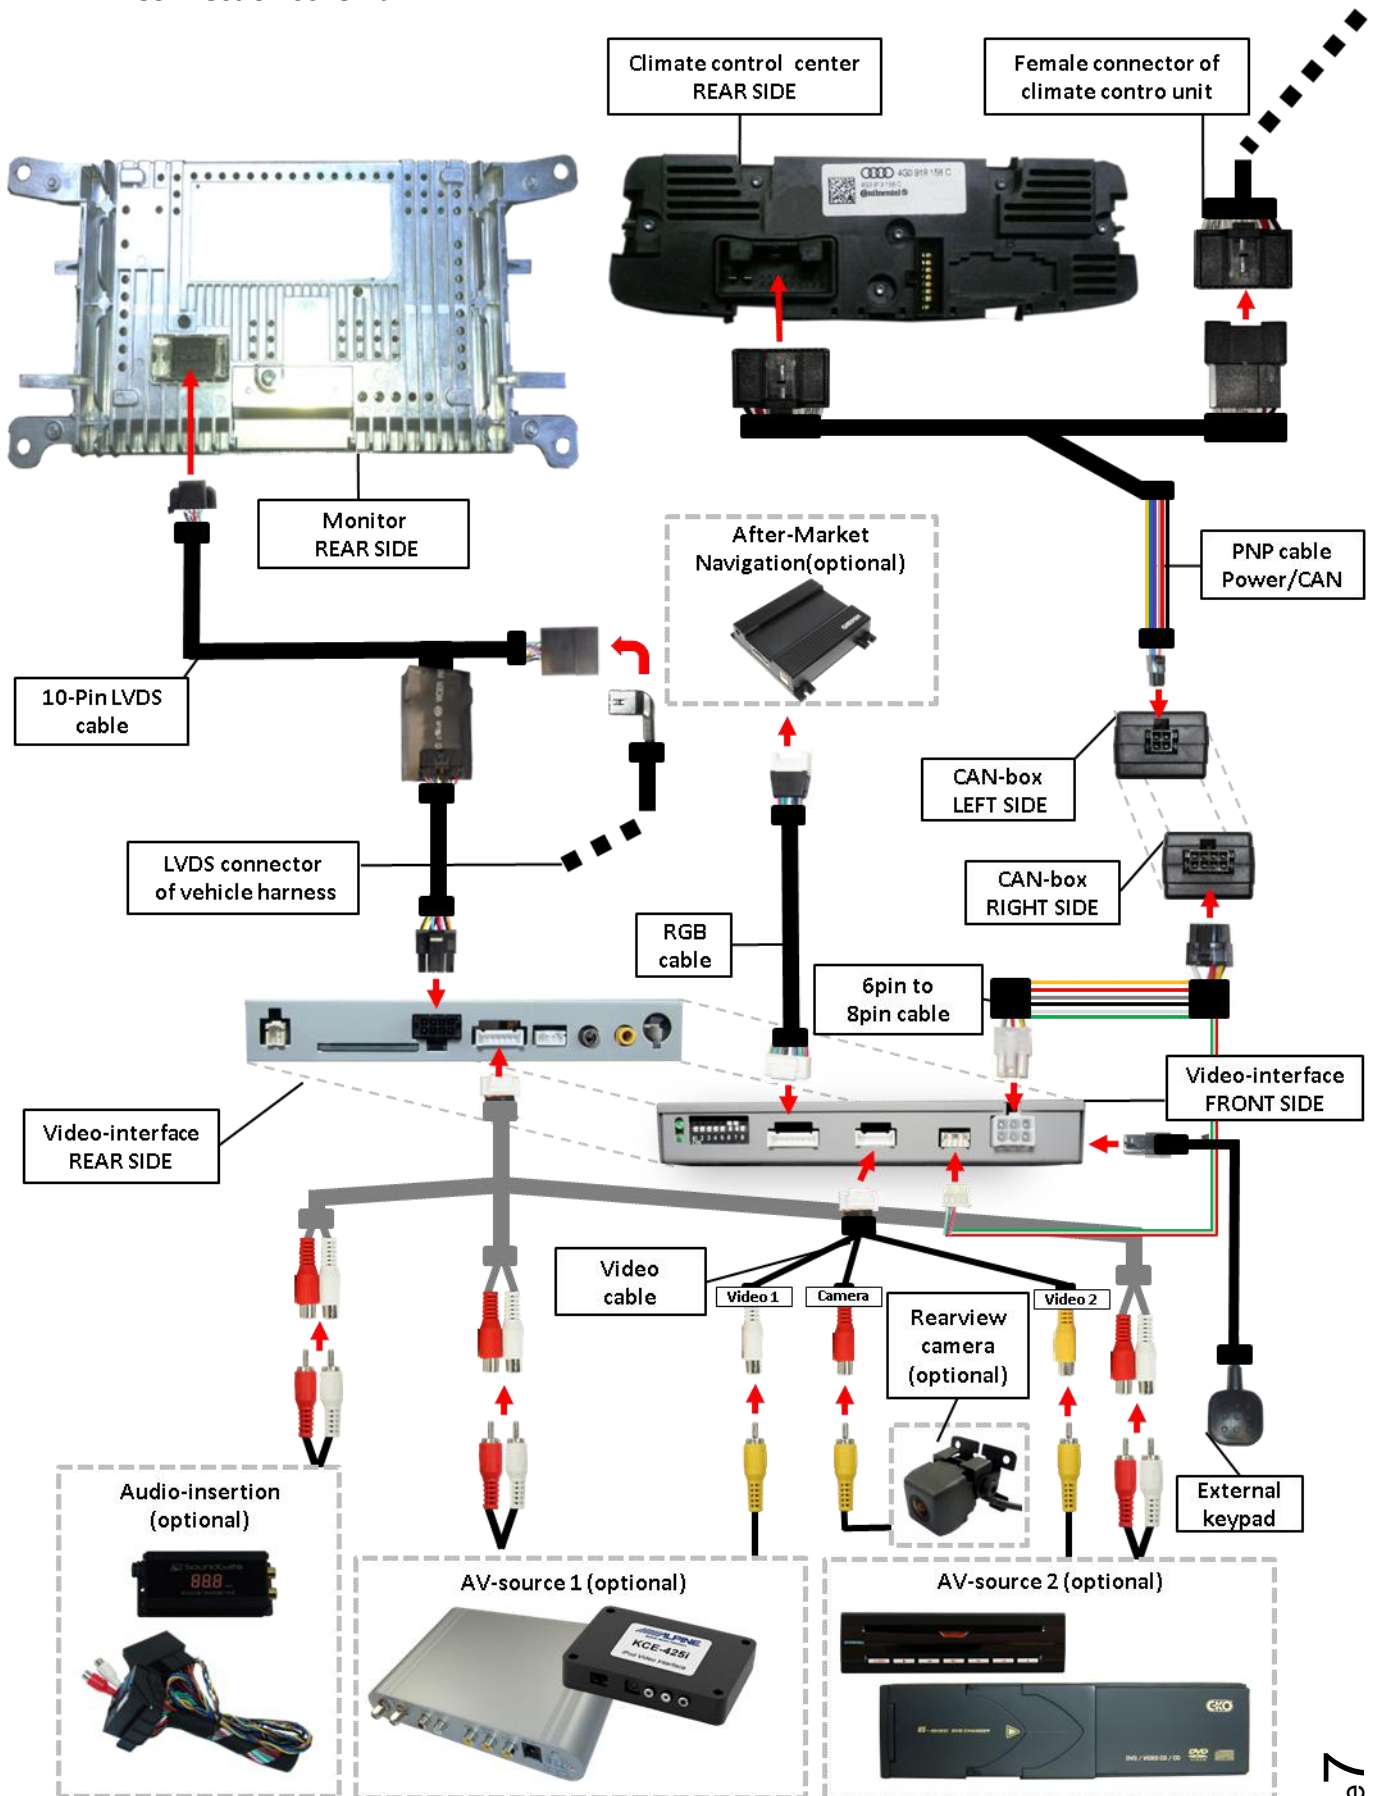

2.3. Connecting video-interface and CAN-box

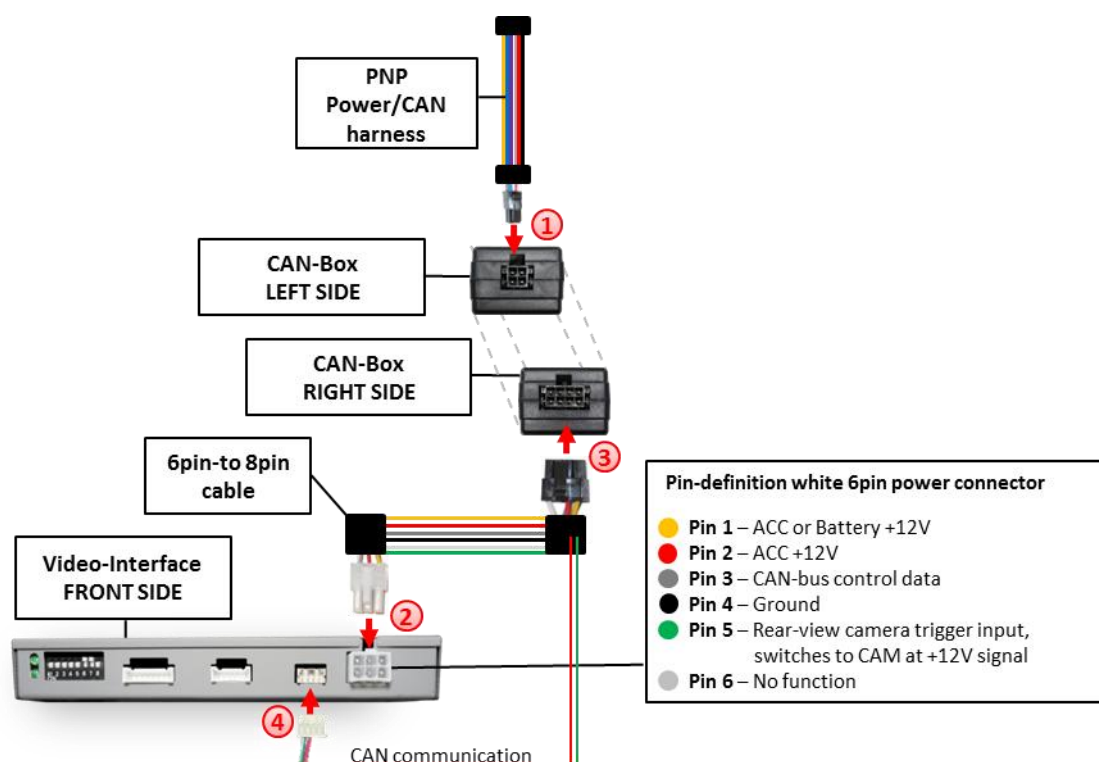

- ① Connect the black female 6pin Micro-Fit connector of the PNP Power/CAN harness to the male 6pin Micro-Fit connector of the CAN-box.

Note: Check the LEDs on CAN-box after reconnecting the battery, two must be on.

- ② Connect the white female 6pin Molex connector of the 6pin to 8pin cable to the male 6pin Molex connector of the video-interface.
- ③ Connect the black female 8pin Micro-Fit connector of the 6pin to 8pin cable to male 8pin Micro-Fit connector of the CAN-box.

- ④ Connect the female 8pin connector of the communication cable to the male 8pin connector of the interface.


Note: Check the LEDs on the video-interface after reconnecting the battery, one must be on.

Note: No liability for vehicle wire colours and pin definition!

Changes by the vehicle manufacturer are possible. The given information has to be verified by the installer.


2.4. Connections to the monitor

Remove head-monitor.

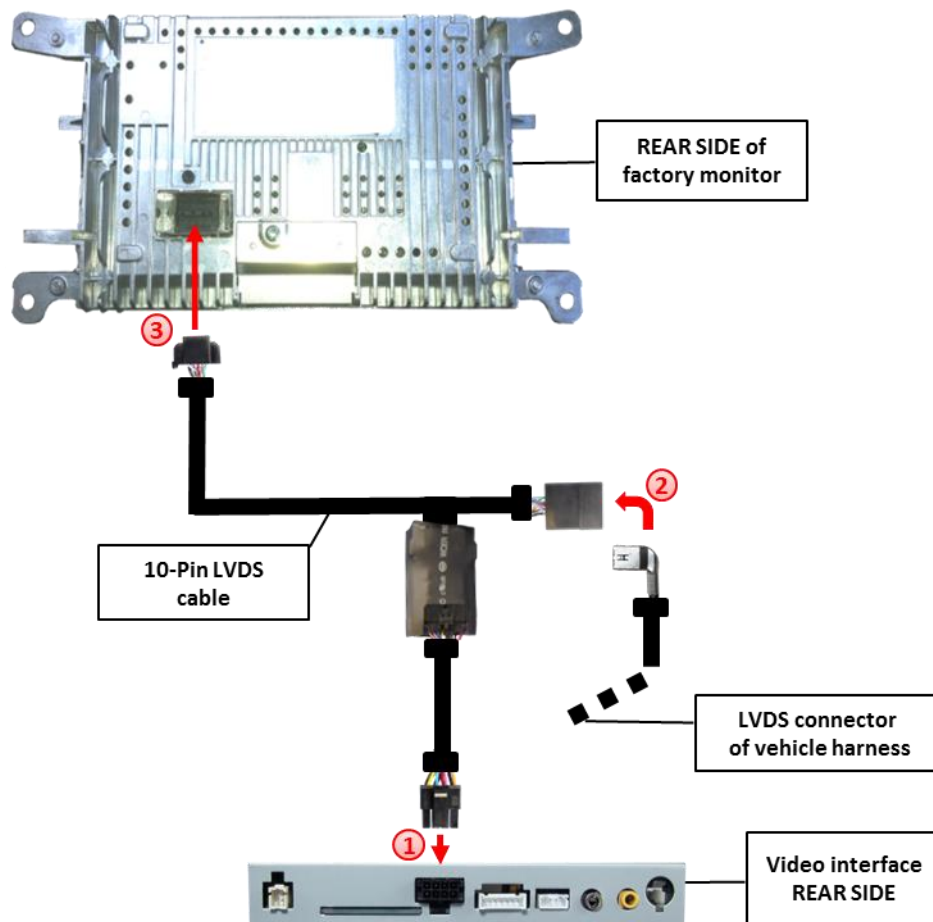

- ① Connect the female 8pin Micro-Fit connector of 10pin LVDS cable to male 8pin Micro-Fit connector of the video-interface.
- ② Disconnect the female 10pin connector of the vehicle harness from the monitor's Rear side and connect it to the male 10pin LVDS connector of the 10pin LVDS cable
- ③ Connect the female 10pin connector of the 10pin LVDS cable with the male 10pin connector of the monitor

2.5. Connection to the climate control unit

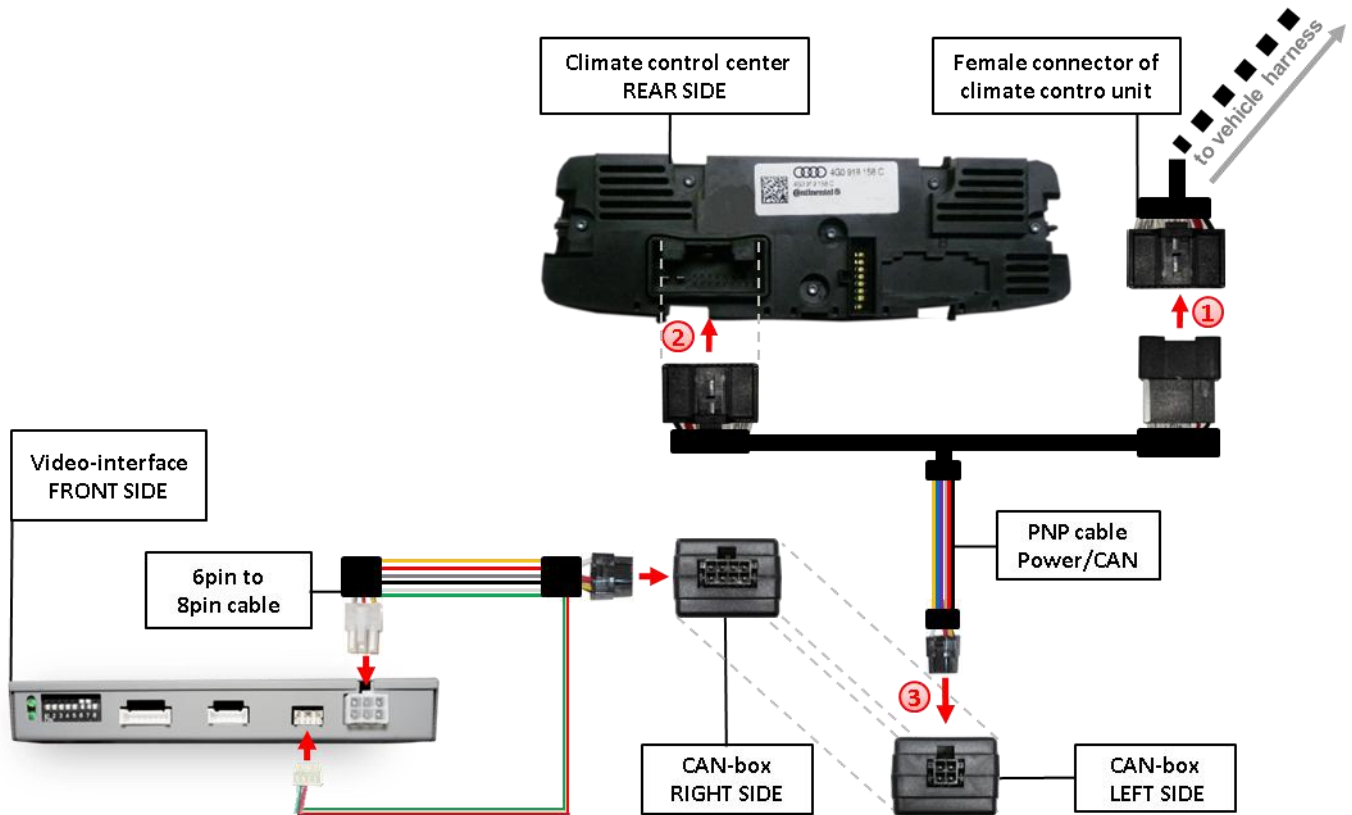


- ① Disconnect the female 20pin connector at the rear side of the climate control unit, connect it to the PNP Power/CAN cable's male 20pin connector, and connect the previously become free male 20pin connector of the climate control unit to the female 20pin connector of the PNP Power/CAN cable.
- ② Connect the PNP Power/CAN cable's female 4-Pin connector to the male 4pin connector of the CAN box.
- ③ Connect the 6pin to 8pin cable's female 8-Pin connector to the male 8pin connector of the CAN-box.
- ④ Connect the 6pin to 8pin cable's female 6pin connector to the male 6pin connector of the video Interface.

2.6. Connecting peripheral devices

It is possible to connect one after-market RGB navigation (or another RGB video source), two after-market AV-sources and one after-market rear-view camera to the video-interface.


Before final installation of the peripheral devices, we recommend a test-run to detect a incompatibility of vehicle and interface. Due to changes in the production of the vehicle manufacturer there's always a possibility of incompatibility.

2.5.1. After-Market RGB navigation

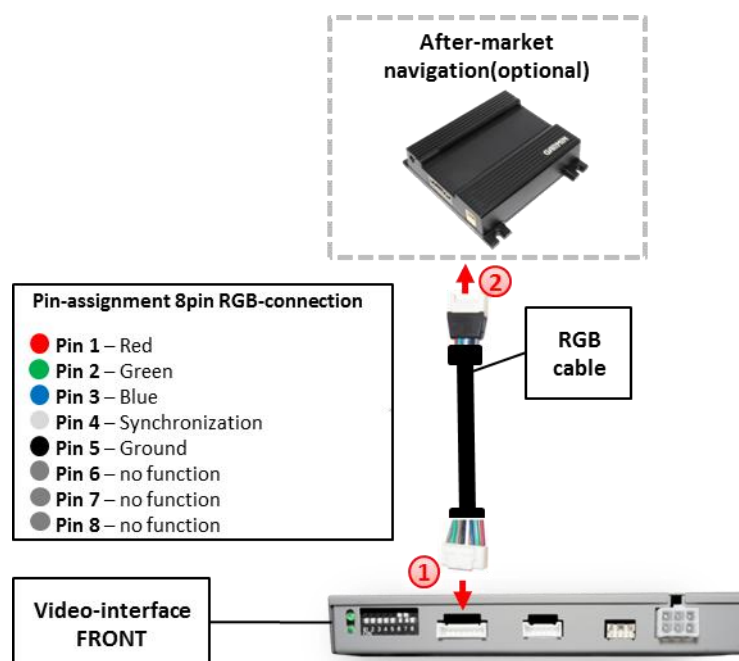

- ① Connect the female 8pin connector of the RGB cable to the male 8pin connector of the video-interface. The loose grey wires don't have any function and have to be isolated.
- ② Connect the male 6pin connector of the RGB cable to the after-Market navigation.

2.5.2. Video-sources to AV1 and AV2

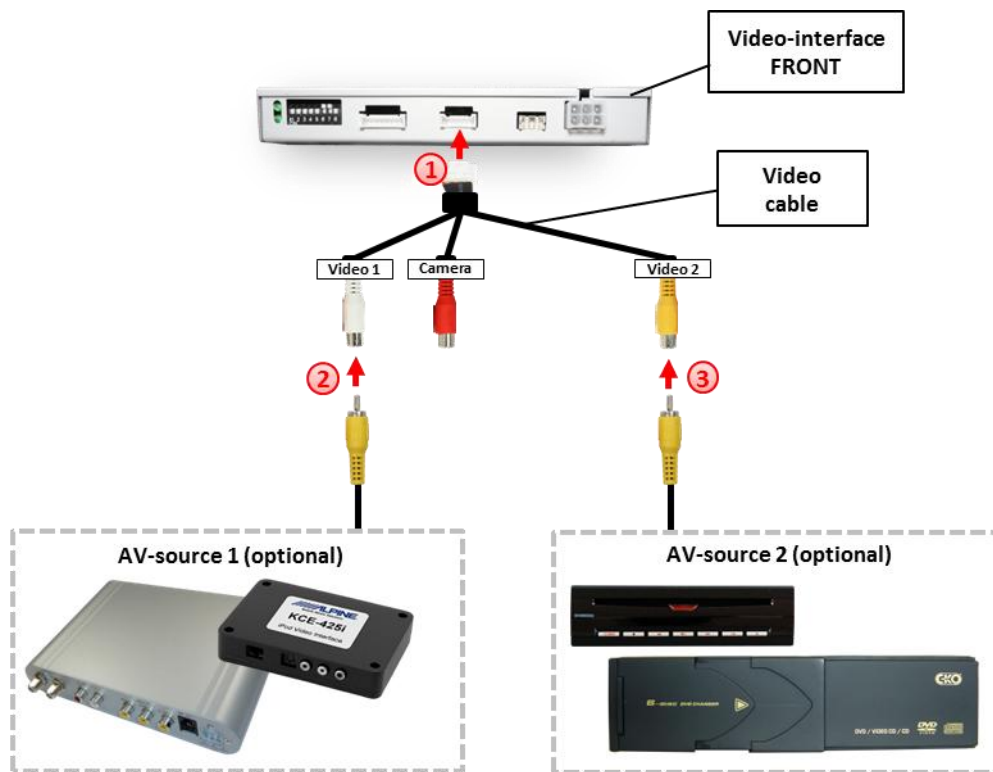


- ① Connect the female 6pin connector of the video cable to male 6pin connector of the video-interface.
- ② Connect the video RCA of the AV-source 1 to the female RCA connector Video 1 of the video cable.
- ③ Connect the video RCA of the AV-source 2 to the female RCA connector Video 2 of the video cable.

2.5.3. Audio-switch and audio-insertion

This interface is only able to insert video signals into the factory infotainment and switch audio signals. If an AV-source is connected to AV1 or AV2, audio insertion must be done by factory audio AUX input or FM-modulator to which the interface's sound-switch output is connected. The factor AUX input has to be coded by a diagnostic tool in a car workshop of the manufacturer's dealership. When the interface is switched from AV1 to AV2, the audio signal is switched parallel to the corresponding video signal by the interface's built-in audio-switch. The inserted video-signal can be activated simultaneously to each audio-mode of the factory infotainment.

Audio pins	Definition
1/2	Audio input signal R/L of source AV2
3/4	Audio input signal R/L of source AV1
5/6	Audio output signal R/L of factory audio AUX or FM-modulator
7	Ground

Note: If only one AV-source shall be connected, it is possible to connect the audio output of the AV-source directly to the point of audio-insertion (e.g. audio AUX input).

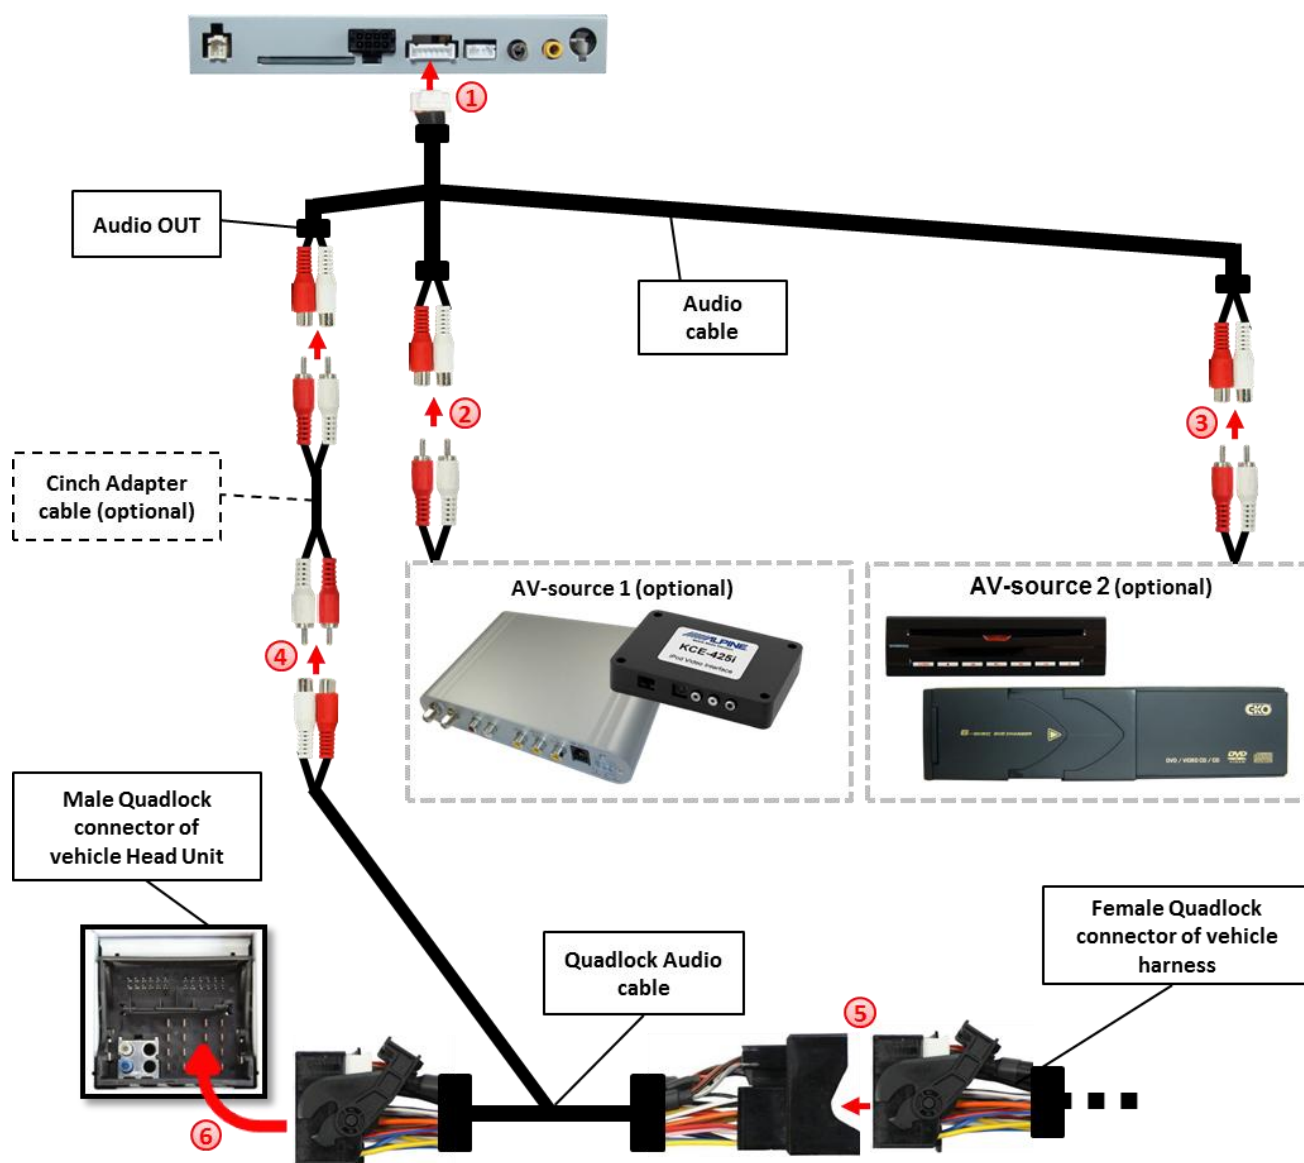

- ① Connect the female 7pin connector of the audio cable to male 7pin connector of the video-interface.
- ② Connect the audio-RCA of the AV-source 1 to the female RCA port AV1 of the audio cable.
- ③ Connect the audio RCA of the AV-source 2 to the female RCA port AV2 of the audio cable.
- ④ Connect the female Audio RCA of the Audio cable to the female RCA of the Quadlock Audio cable (Use the optional Adapter cable)
- ⑤ Disconnect the female Quadlock connector of the vehicle harness from the Head Unit and connect it to the male connector of the Quadlock Audio cable.
- ⑥ Connect the female Quadlock connector of the Quadlock Audio cable to the male Quadlock connector of the vehicle Head Unit.

2.5.4. After-market rear-view camera


Some vehicles have a different reverse gear code on the CAN-bus which the included CAN-box is not compatible with. In this case there are two different ways of installation. If the CAN-box is able to detect an enabled vehicle's reverse gear, the green wire of the 6pin to 8pin cable should carry +12V while the reverse gear is engaged.

Note: Do not forget to set dip5 of video-interface to ON before testing.

2.5.4.1. Case 1: CAN-box receives the reverse gear signal

If the CAN-bus box delivers +12V on the green wire of the 6pin to 8pin cable while reverse gear is engaged, the video interface will automatically switch to the rear-view camera input CAM while the reverse gear is engaged.


Additionally, for the camera's +12V Power supply the green wire of the 6pin to 8pin wire can be used.

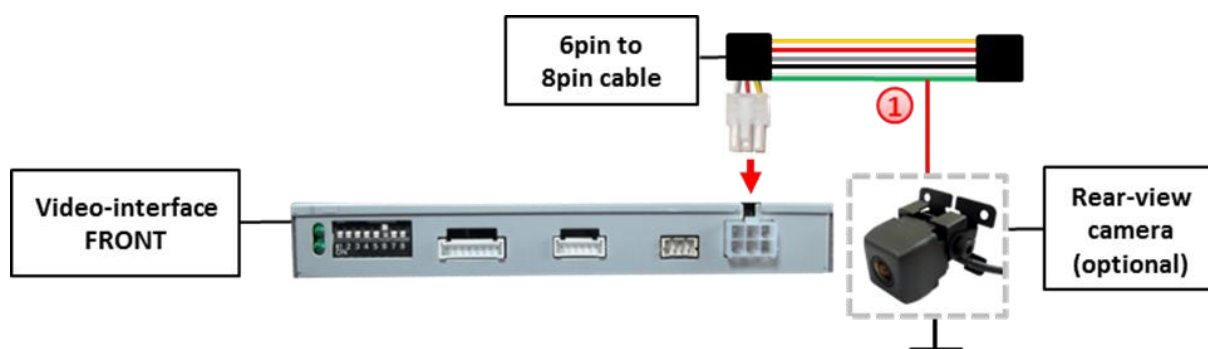

- 1 Strip a little part from the green wire of the 6pin to 8pin cable and connect it to the Power cable of the after-market rear-view camera


2.5.4.2. Case 2: CAN-box does not receive the reverse gear signal

If the CAN-bus interface does not deliver +12V on the green wire of the 6pin to 8pin cable when reverse gear is engaged (not all vehicles are compatible) an external switching signal from the reverse gear light is required. As the reverse gear light signal contains electronic interference, a traditional open relay (e.g. AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. Below schema shows the use of a relay (normally open).

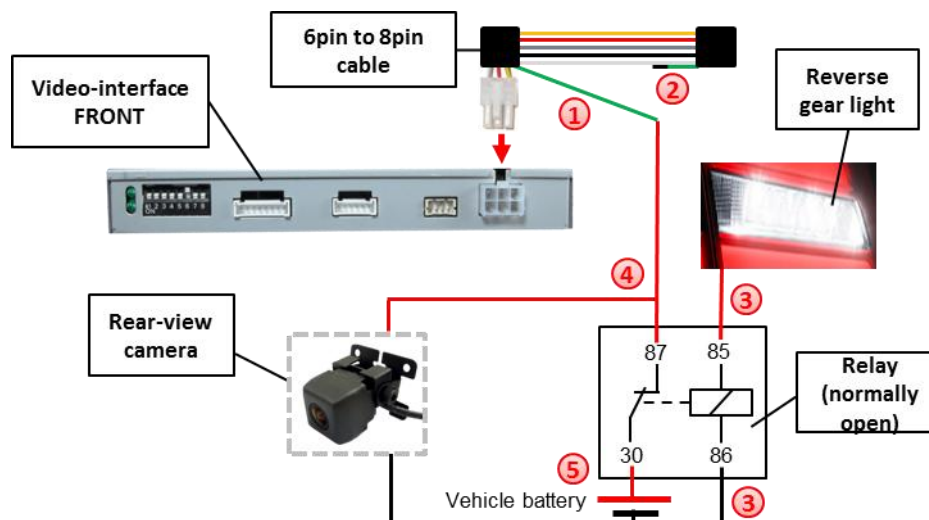

- ① Cut the green cable of the 6pin to 8pin cable close to the black 8pin connector.
- ② Isolate the short end of the green wire (CAN-box side).
- ③ Connect the reverse gear light signal/power to coil (85) and ground to coil (86) of relay.
- ④ Connect the rear-view camera power wire and the green wire (video interface side) of 6pin to 8pin cable both to output (87) of the relay.
- ⑤ Connect permanent battery power to input (30) of relay.


2.5.4.3. Video signal connection

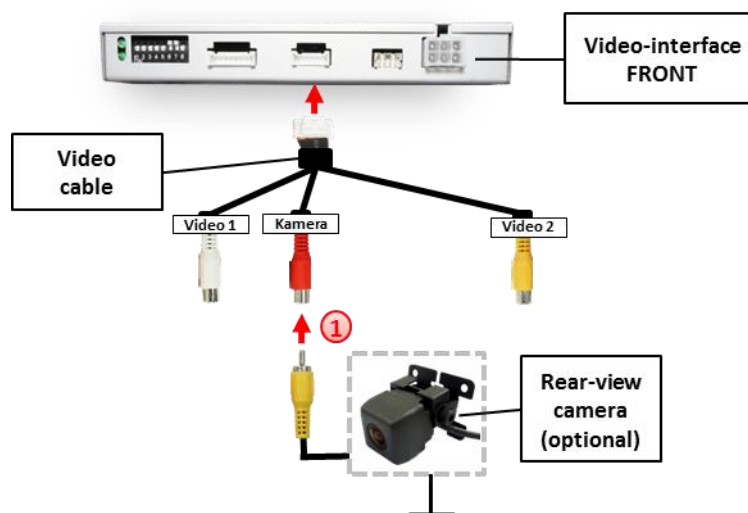

- ① Connect the video-RCA of the after-market rear-view camera to the female RCA port of the video-interface which is labeled as CAM.


Note: The picture settings for CAM input have to be adjusted in AV2.

2.6. Connecting video-interface and keypad

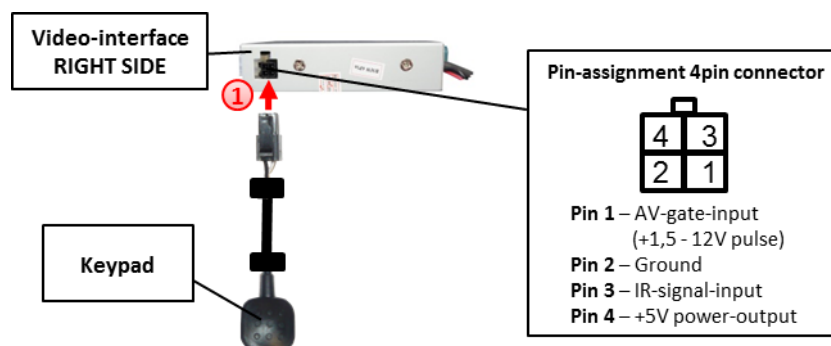

- ① Connect the female 4pin connector of the keypad to the male 4pin connector of the video-interface.

2.7. Picture settings and guide lines

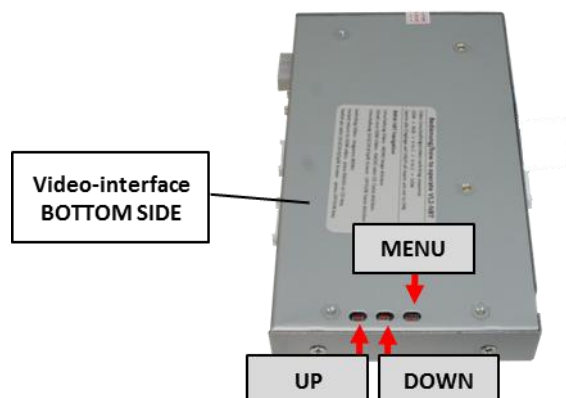


The picture settings are adjustable by the 3 push-buttons on the video-interface. Press the MENU button to open the OSD settings menu or to switch to the next menu item. Press UP and DOWN to change the selected value. The buttons are placed inside in the housing to avoid accidental changes during or after the installation. Picture settings must be done separately for RGB, AV1 and AV2 while the corresponding input is selected and visible on the monitor. **AV2 and CAM share the same settings which must be adjusted in AV2.**

Note: The OSD menu is only shown when a working video source is connected to the selected video-input of the interface.

The following settings are available:

- Contrast
- Brightness
- Saturation
- Position H (horizontal)
- Position V (vertical)
- IR-AV1/2 (no function)
- Guide L/R (no function)
- UI-CNTRL (guide lines ON/OFF)
- Size H/V (picture size horizontal/vertical)

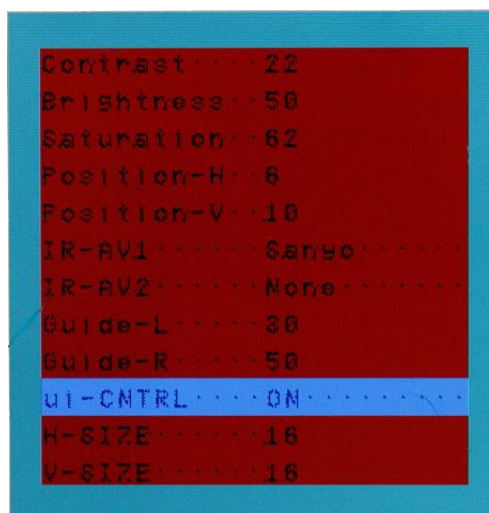

Note: If there is no communication between the CAN box and the vehicle's CAN-bus (several vehicles aren't compatible), the .reverse gear guide-lines can't be shown during the vehicle's operation, even if they once appear after having switched the system to powerless!

3. Interface operation

3.1. By MODE button of the steering wheel

The MODE button of the steering wheel can be used to execute interface functions.

Press MODE button of the steering wheel for **about 3 seconds** to switch the video source.

Each press will switch to the next enabled input. If all inputs are enabled the order is:

Factory video → RGB-in → video IN1 → video IN2 → factory video →...

Inputs which are not enabled are skipped. If the audio cable is connected, when switching from video IN1 to video IN2, also the sound will be switched.

Switchover by vehicle buttons isn't possible in all vehicles. In some vehicles the external keypad must be used.



Note: The white wire of the 6pin to 8pin cable can be used with a +5-12V pulse to switch the video-sources alternatively.

3.2. By keypad

Alternatively or additionally to the MODE button the interface's keypad can be used to execute interface functions.

4. Specifications

BATT/ACC range	7V - 25V
Stand-by power drain	<10mA
Power	0.7A @12V
Video input	0.7V - 1V
Video input formats	PAL/NTSC
RGB-video amplitude	0.7V with 75 Ohm impedance
Temperature range	-40°C to +85°C
Dimensions video-box	154 x 22 x 92 mm (W x H x D)
Dimensions CAN-box	73 x 22 x 30 mm (W x H x D)

  12V DC
--

5. FAQ – Trouble shooting Interface functions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Reason	Possible solution
No picture/black picture (factory picture).	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
	No power on CAN-bus box (all LED CAN-bus box are off).	Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box.
	CAN-bus box connected to CAN-bus in wrong place.	Refer to the manual where to connected to the CAN-bus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface.
No picture/black picture/white picture (inserted picture) but factory picture is OK.	No picture from video source.	Check on other monitor whether video source is OK.
	No video-source connected to the selected interface input.	Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s).
	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
	Wrong monitor settings of video-interface.	Try different combinations of dips 7 and 8 of video-interface. Unplug 6pin power after each change.
Inserted picture totally wrong size or position.		
Inserted picture double or 4 times on monitor.		
Inserted picture distorted, flickering or running vertically.	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard.
	If error occurs only after source switching: Connected sources are not set to the same TV standard.	Set all video sources to the same standard.
	Some interfaces can only handle NTSC input.	Check manual whether there is a limitation to NTSC mentioned. If yes, set source fixed to NTSC output.
Inserted picture b/w.		
Inserted picture qual. bad.		
Inserted picture size slightly wrong.	Picture settings have not been adjusted.	Use the 3 buttons and the interface's OSD to adjust the picture settings for the corresponding video input.
Inserted picture position wrong.		
Camera input picture flickers.	Camera is being tested under fluorescent light which shines directly into the camera.	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.

Symptom	Reason	Possible solution
Camera input picture black.	Camera power taken directly from reverse gear lamp.	Use relay or electronics to "clean" reverse gear lamp power. Alternatively, if CAN-bus box is compatible with the vehicle, camera power can be taken from green wire of 6pin to 8pin cable.
Camera input picture has distortion.		
Camera input picture settings cannot be adjusted.	Camera input picture settings can only be adjusted in AV2 mode.	Set dip 3 of video-interface to ON (if not input AV2 is not already activated) and connect the camera to AV2. Switch to AV2 and adjust settings. Reconnect camera to camera input and deactivate AV2 if not used for other source.
Graphics of a car in camera input picture.	Function PDC is ON in the interface OSD.	In compatible vehicles, the graphics will display the factory PDC distance. If not working or not wanted, set interface OSD menu item UI-CNTRL to ALLOFF.
Chinese signs in camera input picture	Function RET or ALL is ON (function for Asian market) in the interface OSD.	Set interface OSD menu item UI-CNTRL to ALLOFF or PDCON.
Not possible to switch video sources by OEM button.	CAN-bus interface does not support this function for vehicle.	Use external keypad or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Not possible to switch video sources by external keypad.	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
	SW-version of interface does not support external keypad.	Use OEM-button or cut white wire of 6pin to 8pin cable and apply +12V impulses for AV-switching.
Interface does not switch to camera input when reverse gear is engaged.	CAN-bus interface does not support this function for the vehicles.	Cut the green wire of the 6pin to 8pin cable and apply +12V constant from reverse gear-lamp signal. Use relay to "clean" R-gear lamp power.
Interface switches video-sources by itself.	CAN-bus interface compatibility to vehicle is limited.	Cut the grey wire of 6pin to 8pin and isolate both ends. If problem still occurs, additionally cut the white wire of 6pin to 8pin cable and isolate both ends.



10R-03 5384

Made in China

